GarrettCom™

Industrial Networking at Its Best™

Magnum 6K25e
Gigabit Fiber Switch

Hardware

Installation and User Guide

Magnum™ 6K25e

Managed Fiber Switch

Hardware
Installation and User Guide

Part #: 84-00163Z (Rev. A)

Trademarks

Ethernet is a trademark of Xerox Corporation

NEBS is a trademark of Telcordia Technologies

UL is a registered trademark of Underwriters Laboratories

GarrettCom, Magnum and **Personal Switch** are trademarks and **Personal Hub** is a registered trademark of GarrettCom, Inc.

> **Important:** The Magnum 6K25e Managed Fiber Switch contains no user serviceable parts. Attempted service by unauthorized personnel shall render all warranties null and void. If problems are experienced with Magnum 6K25e Switch products, consult Section 6, Troubleshooting, of this User Guide.

Copyright © 2007 GarrettCom, Inc. All rights reserved. No part of this publication may be reproduced without prior written permission from GarrettCom, Inc.

Printed in the United States of America.

Contacting GarrettCom, Inc

Please use the mailing address, phone and fax numbers and email address listed below:

GarrettCom, Inc.

47823 Westinghouse Dr.

Fremont, CA 94539-7437

Phone (510) 438-9071

Fax (510) 438-9072

Website: http://www.GarrettCom.com

email support@garrettcom.com

Federal Communications Commission

Radio Frequency Interference Statement

This equipment generates, uses and can radiate frequency energy and if not installed and used properly, that is in strict accordance with the manufacturer's instructions, may cause interference to radio communication. It has been tested and found to comply with the limits for a Class A computing device in accordance with the specifications in Subpart J of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Canadian Emission

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil respecte toutes les exigences du Réglement sur le matériel du Canada. Cet appareil est Classe A..

TABLE OF CONTENTS **Page**

1.0 SPECIFICATIONS 1
1.1 Technical Specifications 1
1.2 Ordering Information 4
2.0 INTRODUCTION 7
2.1 Inspecting the Package and Product 7
2.2 Product Description - Magnum 6K25e Managed Fiber Switch 7
2.2.1 Magnum 6K25e and 6K25eR chassis 9
2.2.2 Eight-port SFF fiber modules 100Mb fiber 9
2.2.3 Eight-Port Copper Module, 6K8-RJ45 10
2.2.4 *New* PoE(Power Inside), model PI6KP8-45RJ (MDIX) 8-port 11
2.2.5 *New* PoE(Power Pass-through), model P6KP8-RJ45 (MDIX) 8-port 12
2.2.6 Six-Port "4 + 2"Combo Modules, ST or SC 12
2.2.7 Four-Port 10 Mb mm Fiber ST Modules 13
2.2.8 Gigabit (1000Mbps) port modules 14
2.2.9 Packet Prioritization, 802.1p QOS 15
2.2.10 Frame Buffering and Flow Control 15
2.2.11 Managed Network Software (MNS-6K) for 6K25e-Series 16
3.0 INSTALLATION 21
3.1 Locating Magnum 6K25e Switches 21
3.2 Connecting Ethernet Media 22
3.2.1 Connecting Fiber Optic ST-type, "twist-lock" 22
3.2.2 Connecting Fiber Optic SC-type, "Snap-In" 23
3.2.3 Connecting Single-Mode Fiber Optic 23
3.2.4 Connecting Twisted Pair (RJ-45,CAT3, CAT5,) 23
3.2.5 Connecting Twisted Pair (CAT5E or better,) 24
3.2.6 Gigabit SFP (SF-factor Pluggable) Optical Transceivers 25
3.3 Table-Top or Shelf Mounting 26
3.3.1 Rack-mounting (for 19" RETMA racks), regular 6K25es 27
3.3.2 Rack-mounting, Reverse version of the Magnum 6K25es 28
3.4 Powering the Magnum Managed Fiber Switch 28
3.4.1 Alarm Contacts for monitoring internal power, Software Traps 29
3.5 6K25e Port Module (6KPM) Installation 30
3.5.1 Preparation for Installing and Removing 6KPMs 30
3.5.2 Installing 6KPM Cards in the Magnum 6K25e 32
3.6 Connecting the Console Terminal to Magnum 6K25e 36
3.6.1 RS-232 (DB-9) Console Com port (Serial port) pin 37
4.1 Switching Functionality 37
4.2 Status LEDs 38
4.3 Up-link MDI-MDIX on RJ-45 port modules, for port 1 only 38
4.4 Auto-Cross(MDIX) and Auto-negotiation, for RJ-45 ports 39
4.5 Flow-control, IEEE 802.3x standard 40
4.6 Power Budget Calculations for Magnum 6K25e PM's with Fiber Media 41

5.0 6K25E MANAGED FIBER SWITCH PORT MODULES 42
5.1 Inspecting the Package and Product 43
5.2 6KPM Module Description 43
5.2.1 6KP6-RJMST, multi-mode FX-ST "twist lock" Module 44
5.2.1a 6KP6-RJ10ST FX-ST "twist lock" Combo Module 44
5.2.1b 6KP4-F10ST, "twist lock" Module 44
5.2.1c 6KP4-FLSTFX, multi-mode FX-ST "twist lock" Module 45
5.2.2. 6KP6-RJMSC multi-mode FX-SC "snap-in" Fiber connector 46
5.2.3 6KP6-RJSSC single-mode FX-SC-type, "snap-in" connector 46
5.2.4 6KP6-RJSSCL single-modeFX-SC-type, "snap-in" connector 47
5.2.4a 6KP6-RJ10ST multi-modeFL-ST-type, "twist-lock" connector 47
5.2.5 6KP8-MTRJSmall-Form-factor 48
5.2.5a 6KP6-MT10ST FX , MTRJ Small-Form-Factor ST-Fiber port 48
5.2.6 6KP8-45MTmulti-mode FX MTRJ Small-Form-Factor 49
5.2.7 6KP8-MLC multi-mode LC connector Small-Form Factor 49
5.2.8 6KP8-45LC, Combo multi-mode -LC small-formfactor 50
5.2.9 6KP8-RJ45 (Twisted Pair), 10/100Mb 8-Port 50
5.2.10 *New* PoE(Power Inside), model PI6KP8-45RJ (MDIX) 51
5.2.11 *New* PoE(Power Pass-through), model P6KP8-RJ45 (MDIX) 52
5.2.12 6KP8-45-2MT, multi-mode FX , MTRJ Small-Form-Factor 53
5.2.12a 6KP8-45-2LCsingle-mode FX , LC Small-Form-Factor 53
5.2.13 GBIC-SXSC Gigabit fiber(1000Mb), mm SC Connector 54
5.2.13a GBIC-LXSC & ZXSC Gigabit fiber (1000Mb), sm SC 54
5.2.14 6KM-BLNK 55
6.0 TROUBLESHOOTING 55
6.1 Before Calling for Assistance 55
6.2 When Calling for Assistance 56
6.3 Return Material Authorization (RMA) Procedure 56
6.4 Shipping and Packaging Information 57
APPENDIX A: WARRANTY INFORMATION 57
APPENDIX B : INTERNAL DC POWER SUPPLY OPTIONS 58
APPENDIX C: INTERNAL DC DUAL-SOURCE POWER OPTION 60

Revisions

Rev A 10/07 : This rev. is the initial release of the 6K25e manual.

The Magnum Line

INDUSTRIAL NETWORKING PRODUCTS

"DESIGNED AND MANUFACTURED IN THE USA"

OVERVIEW

GarrettCom, Inc. offers the premium-quality Magnum™ line of INDUSTRIAL conectivity products with industry-standard functionality and built-in fiber configurability. Magnum products are designed for use in demanding Industrial Grade, Carrier Class, POWER UTILITY and OEM applications where reliability is a primary consideration.

6K-Series Managed Field Switches, Gigabit, 100 and 10 Mbps, fiber and copper ports, mix-and match. Features SFF fiber and DC power in 1U units.

DX-Series Serial Device Routers, Ethernet and Serial

4K-Series Switches, 100 and 10 Mbps, copper ports with optional fiber port, with auto-negotiating full switching performance.

Quad-Series Fiber Switches, 100 & 10Mbps, fiber and copper ports, mixed-speed and mixed-media types, full switching performance.

mP62 and P62F "Outdoor" Ethernet SwitchES, for temperature uncontrolled locations, 6 10/100 and 2 100Mb fiber ports, can be connected in strings

Mixed-Media Fiber Hub, 16-port, 10/100 auto-sensing

Dual Speed 8-port and 16-port, 10/100 auto-sensing HUBS

Personal Switches, 10/100Mb

8 port dual-speed, Auto-negotiable with fiber option

Personal Hubs, 100Mb or 10/100Mb 8-port, with 2 switched ports (1 fiber built in)

Personal Hubs, 10Mb series 8-port + AUI, stackable to 5 high, + optional BNC of fiber port 8 or 9-port and 4 or 5-Port Personal Hubs, w/ man. up-link sw**.**

Media Converters, 10Mb and 100Mb series, All media combinations, incl. fiber ST, SC, mm., single mode

The "X-line" of configurable MiXed Media products:

Stackable Concentrators, SNMP optional, 13-Ports

Mini-Concentrators, 7 Ports, **Repeaters**, 2-Ports

Repeater Port Modules (RPMs), 6 types for Ethernet media

COAX Transceivers, 10Mb series

Oct., 07

1.0 SPECIFICATIONS

1.1 Technical Specifications

Performance

Filtering / Forwarding Rate:
Ethernet:14,880 pps
Fast Ethernet: 148,800 pps
Gigabit Ethernet: 1, 488,000 pps
Switching Processing Type: Store and Forward with IEEE 802.3x full-duplex flow -control, non-blocking
Data Rate: 10Mbps,100Mbps and 1000Mbps
Address Table Capacity: 4K node, self-learning with address aging
Packet buffer size : 240KB for 10/100 and 120KB for 1000Mb
Latency: 5 µs + packet time (100 to 100Mbps)
15 µs + packet time (10 to 10 Mbps, and 10 to 100Mbps)

Network Standards and Compliance, hardware

Ethernet V1.0/V2.0 IEEE 802.3: 10BASE-T,
IEEE 802.3u: 100Base-TX, 100BASE-FX
IEEE 802.3z: 1000BASE-X Ethernet(Auto-negotiation)
IEEE 802.3ab: 1000BASE-X Ethernet
IEEE 802.1p: Priority protocol
IEEE 802.1d: Spanning tree protocol
IEEE 802.1w: Rapid Spanning tree protocol
IEEE 802.1q: VLAN Tagging
IEEE 802.3x: Flow Control

Maximum 10 Mbps Ethernet Segment Lengths

Unshielded twisted pair	- 100 m (328 ft)
Shielded twisted pair	- 150 m (492 ft)
10BASE-FL multi-mode fiber optic	- 2 km (6,562 ft)
10BASE-FL single-mode fiber optic	- 10 km (32,810 ft)

Maximum Standard Fast Ethernet Segment Lengths:

10BASE-T (CAT 3, 4, 5 UTP)	- 100 m (328 ft)
100BASE-TX (CAT 5 UTP)	- 100 m (328 ft)
Shielded twisted pair	- 150 m (492 ft)
100BASE-FX, half-duplex, multi-mode	- 412 m (1350 ft)
100BASE-FX, full-duplex, multi-mode	- 2.0 km (6,562 ft)
100BASE-FX, half-duplex, single-mode	- 412 m (1350 ft)
100BASE-FX, full-duplex, single-mode	- 20.0 km (66K25e ft)
100BASE-FX, full-duplex, Long Reach	- 40.0 km (122K ft)

Maximum Standard Gigabit Ethernet Segment Lengths:

1000BASE-T (CAT5E or higher is recommended) - 100 m (328 ft)
1000BASE-SX, full-duplex, multi-mode(62.5µm cable) - 220m
1000BASE-SX, full-duplex, multi-mode(50µm cable) - 550m
1000BASE-LX, full-duplex, single-mode(62.5µm cable) -5Km

Fiber Multi-mode connector types supported:

Fiber Port, ST-type (twist-lock):Fiber multi-mode, 10Mb 10BASE-FL
Fiber Port, MTRJ-type (plug-in):SFF Fiber multi-mode100BASE-FX
Fiber Port, SC-type (snap-in):Fiber optic multi-mode, 100BASE-FX
Fiber Port, ST-type (twist-lock): Fiber optic m.-mode, 100BASE-FX
Fiber Port, 1000BASE-FX, GBIC modules

Fiber Single-mode connector types:

Fiber Port, SC-type: Fiber optic single-mode, 100BASE-FX
Fiber Port, LC-type Fiber SFF single-mode, 100BASE-FX
Fiber Port, 1000BASE-FX, GBIC modules

LEDs: Per Port

LK: Steady ON when media link is operational
ACT: ON with receiver port activity
FDX/HDX: ON = Full-Duplex Mode
OFF = Half-Duplex Mode
100/10: ON = 100Mbps speed
OFF = 10 Mbps

Operating Environment

UL 60950 "Component Parts" temp. rating: 130° F (55°C)
IEC 60068 "Type Test" rating: -40°to 185°F (-40°to 85°C)
Storage: -40°to 185°F (-40°to 85°C)
Ambient Relative Humidity: 5% to 95% (non-condensing)
Altitude: -200 to 13,000 ft. (-60 to 4000m)
Conformal Coating option: Request quote

Packaging

Enclosure: Rugged High strength metal. Suitable for stand-alone or rack-mounting
Dimensions: 1.70in. H x 17.0in. W x 9.0in. D
4.32cm H x 43.2cm W x 22.9cm D
Cooling method: Fan cooled, @ 3@ 7 cfm ea.

Management Console connector

DB-9 for RS-232 " null-modem " cable (sometimes called an Xmodem cable)

Power Supply (Internal)

AC Power Connector: IEC-type, male recessed at rear of chassis, with adjacent manual ON-OFF switch (on AC models only)
Input Voltage: 100 to 240 VAC (auto-ranging)
Input Frequency: 47 to 63 Hz (auto-ranging)
Power Consumption: 55 watts typical
60 watts max (for a fully loaded fiber model)
35 watts for a fully-loaded copper only model

DC Power Supply (Options)

-48VDC Power Input Voltage : -36 to -70 VDC
24VDC Power Input Voltage : 20 to 40 VDC
125VDC Power Input Voltage : 88 to 300VDC
Std. Terminal Block : " -, GND, + "
Power Consumption: same as for AC models, see above

For DC internal power supplies at –48VDC, 24VDC and 125VDC, including Dual Source options (for continuity of operation when either of the DC input sources are interrupted), see Appendices B and C.

Per-port MDI or MDIX on RJ-45

The copper daughter board has MDI-MDIX Auto-crossover on all the RJ-45 ports., and eliminate the use of cross-over cable between the devices. Also port-specific user settings (such as FDX or HDX, copper 10/100 speed) can be fixed using software commands.

Alarm Contact (Optional)

Alarm Contact option is offered as a configuration option. The two alarm contacts are SPST NC Form-C relays, and an open condition indicates abnormal status. The Hardware Alarm monitors internal power on the main board, and the Software Alarm is activated by one or more user-selected software traps.

Agency Approvals

UL listed (UL60950), cUL, CE, Emissions meet FCC Part 15 Class A
NEBS Level 3 and ETSI Certified for Carrier Central Offices
IEEE 1613 Class 2 Environmental Standard for Electric Power Substations
See also **Note for Power Substations** in Section 3.2.4, 3.6.1, and 5.2.9
IEC 61850 EMC and Operating Conditions Class C for Power Substations

Warranty: Three years, return to factory Made in USA

NEBS Testing and Certification: NEBS certified
Email **sales@GarrettCom.com** for details.

1.2 Ordering Information

Magnum Managed Fiber Switch

MODEL **DESCRIPTION**

Magnum 6K25e Magnum 6K25e Managed Fiber Switch, base unit.

May be configured with a selection of 10/100/1000 6K25e fiber and copper port connector types, 25 total ports max. Wire speed filtering and forwarding across all ports, 802.3x flow control, 802.1p priority packet processing, self-learning 4K-node address table, large 240KB packet buffers for 10/100 and 120KB for 1000Mb. Plug-and-play switching services, front-mounted LEDs, internal auto-ranging AC power supply, 19" rack-mounting brackets. For licensed managed networks software, see MNS materials.

Magnum 6K25eR: "Reverse" model, same as Model 6K25e except the user ports and the power input connectors are in the rear. Two sets of LEDs (both rear and front) provide duplicate status data for viewing from either side.

Magnum 6K25e-48VDC: Same as 6K25e except the power input is –48VDC

Magnum 6K25eR-48VDC: Same as 6K25eR except the power input is –48VDC

Magnum 6K25e-24VDC: Same as 6K25e except the power input is 24VDC

Magnum 6K25eR-24VDC: Same as 6K25eR except the power input is 24VDC

Magnum 6K25e-125VDC: Same as 6K25e except the power input is 125VDC

Magnum 6K25eR-125VDC: Same as 6K25eR except the power input is 125VDC

Configuration Options:

Each Magnum 6K25e and 6K25eR base unit has four port module slots. The first three (A,B,C) may be one of the modules below, one (slot D) may only be a Gigabit module. Select up to four port modules per base unit.

Magnum 6K25e	**Port Modules**
6KP8-MTRJ	SFF Fiber module, w/eight 100Mb mm FX MT-RJ connectors
6KP8-MLC	SFF Fiber module, w/eight 100Mbps mm FX LC connectors
6KP8-SLC	SFF Fiber module, w/eight 100Mbps sgl-m FX LC connectors
6KP8-RJ45	TP Module, w/eight 10/100Mbps auto-negotiating RJ-45 ports
6KP4-F10ST	"2+2" 10Mb Fiber module, w/ four 10Mb 2km FL ST connectors
6KP4-FXST	"2+2" 100Mb Fiber module, w/ four 100Mb 2km FX ST connectors
6KP4-FLSTFX	"2+2" ST Fiber module, w/ two 100Mb & two 10Mb ports, 2km
6KP8-45MT	"4+4" module, w/four RJ-45 ports and four 2km mm FX MT-RJ's
6KP8-45LC	"4+4" module, w/four RJ-45 ports and four 2km mm LC connectors
6KP8-45-2MT	"6+2" module, w/six RJ-45 ports and two 2km mm MTRJ connectors
6KP8-45-2SLC	"6+2" module, w/six RJ-45 ports and two 100Mb 15km sgl. mode FX LC connectors
6KP6-RJMST	"4+2" module, w/four RJ-45 ports and two 2km mm FX SC's
6KP6-RJMSC	"4+2" module, w/four RJ-45 ports and two 2km mm FX ST's
6KP6-RJSSC	"4+2" module, w/four RJ-45 ports and two 20km Sgl.m FX SC's
6KP6-RJSSCL	"4+2" module, w/four RJ-45 ports and two 40km Sgl.m FX SC's
6KP6-MT10ST	"4+2" module, w/four MTRJ ports and two 10Mb 2km FL ST's
6KP6-RJ10ST	"4+2" module, w/four RJ-45 ports and two 10Mb 2km FL ST 's

For Gigabit module configuration options

GBPM-COTX One slot Gigabit 6K module for 6K25e Switches, uses one 6K25e slot and provides one GBIC open transceiver port for a user-selectable GBIC transceiver module

GBIC-SXSC GBIC transceiver module for use in GBPM-xOTX, one 1000BASE-SX port with mm SC fiber connector

GBIC-LXSC10 GBIC transceiver module for use in GBPM-xOTX, one 1000BASE-LX/LH port with 1310nm sgl. mode SC(10km) fiber connector

GBIC-LXSC25 GBIC transceiver module for use in GBPM-xOTX, one 1000BASE-LX/LH port with 1310nm sgl. mode SC(25km) fiber connector

GBIC-LXSC40 GBIC transceiver module for use in GBPM-xOTX, one 1000BASE-ZX port with 1550nm, sgl. mode SC(40km) fiber connector

GBIC transceiver module for use in GBPM-COTX, one LX port with mm SC fiber connector

GBIC-LXSC70 GBIC transceiver module for use in GBPM-xOTX, one 1000BASE-ZX port with 1550nm, sgl. mode SC(70km) fiber connector

GBIC-TP GBIC transceiver module for use in GBPM-xOTX, one 802.3ab 1000BASE-T port, RJ-45 connector

6KM-BLNK Blank cover for one 6K25e (A,B,or C) module slot opening in a Magnum 6K25e or 6K25eR chassis

CONSOLE CBL Industry standard serial cable, DB-9 connectors for RS-232 " null-modem " connection (sometimes called an Xmodem cable), used to connect a PC or a character terminal to the Management port.

CONSOLE USB Console attachment cable, serial to USB, cable with one DB9 for the managed Switch and a USB interface for the USB connector to a PC.

6K PoE Modules with 48VDC Pass-Through

Configuration options: only one A, B or C module slot of 6K-Series switch with 48VDC power input may be configured with a PoE Modules

***New* P6KP8-RJ45** 8 port PoE module for 6ks with 48vdc PS, w/eight PoE power source 10/100 auto-negotiating auto cross RJ-45 ports.

***New* P6KP8-45RJ** "4+4" port PoE module for 6ks with 48vdc PS, w/four PoE power source and four 10/100 auto-negotiating auto cross RJ-45 ports

***New* P6KP8-45MT** "4+4" port PoE module for 6ks with 48vdc PS, w/four PoE power source and four 100 Mb 2km mm FX MTRJ connectors

***New* P6KP8-45MLC** "4+4" port PoE module for 6ks with 48vdc PS, w/four PoE power source and four 100 Mb 2km mm FX LC connectors

***New* P6KP8-45SLC** "4+4" port PoE module for 6ks with 48vdc PS, w/four PoE power source and four 100 Mb 15km sm FX LC connectors

***New* P6KP8-45-2MT** "6+2" port PoE module for 6ks with 48vdc PS, w/four PoE power source and two normal RJ-45 10/100 ports +two100 Mb 2km mm FX MTRJ connectors

***New* P6KP8-452SLC** "6+2" port PoE module for 6ks with 48vdc PS, w/four PoE power source and four 100 Mb 15km Sm FX LC connectors

***New* P6KP6-RJMST** "4+2" port PoE module for 6ks with 48vdc PS, w/four PoE power source and two 100 Mb 2km mm FX ST connectors

***New* P6KP6-RJMSC** "4+2" port PoE module for 6ks with 48vdc PS, w/four PoE power source and two 100 Mb 2km mm FX SC connectors

***New* P6KP6-RJSSC** "4+2" port PoE module for 6ks with 48vdc PS, w/four PoE power source and two 100 Mb 20km sm FX SC connectors

***New* P6KP6-RJSSCL** "4+2" port PoE module for 6ks with 48vdc PS, w/four PoE power source and two 100 Mb 40km sm FX SC connectors

***New* P6KP6-RJ10ST** "4+2" port PoE module for 6ks with 48vdc PS, w/four PoE power source and two 10 Mb 2km sm FL ST connectors

6K PoE Modules with 48VDC Power Inside

NOTE: For configuring in 6K Switches having AC /125VDC power input

Configuration options: only one A, B or C module slot of 6K-Series switch with 48VDC power input may be configured with a PoE Modules

***New* 6KAC-PoE-PS** Power supply for PoE to 4 ports, 60 watts, mounts inside of a full-width rack-mount 6K switch with AC power input.

***New* 6K125VDC-PoE-PS** Power supply for PoE to 4 ports, 60 watts, mounts inside of a full-width rack-mount 6K switch with 125VDC power input.

***New* PI6KP8-45RJ** "4+4" port PoE module for 6ks with 48vdc PS, w/four PoE power source and four 10/100 auto-negotiating auto cross RJ-45 ports

***New* PI6KP8-45MT** "4+4" port PoE module for 6ks with 48vdc PS, w/four PoE power source and four 100 Mb 2km mm FX MTRJ connectors

***New* PI6KP8-45MLC** "4+4" port PoE module for 6ks with 48vdc PS, w/four PoE power source and four 100 Mb 2km mm FX LC connectors

***New* PI6KP8-45SLC** "4+4" port PoE module for 6ks with 48vdc PS, w/four PoE power source and four 100 Mb 15km sm FX LC connectors

***New* PI6KP8-45-2MT** "6+2" port PoE module for 6ks with 48vdc PS, w/four PoE power source and two normal RJ-45 10/100 ports +two100 Mb 2km mm FX MTRJ connectors

***New* PI6KP8-452SLC** "6+2" port PoE module for 6ks with 48vdc PS, w/four PoE power source and four 100 Mb 15km Sm FX LC connectors

***New* PI6KP6-RJMST** "4+2" port PoE module for 6ks with 48vdc PS, w/four PoE power source and two 100 Mb 2km mm FX ST connectors

***New* PI6KP6-RJMSC** "4+2" port PoE module for 6ks with 48vdc PS, w/four PoE power source and two 100 Mb 2km mm FX SC connectors

***New* PI6KP6-RJSSC** "4+2" port PoE module for 6ks with 48vdc PS, w/four PoE power source and two 100 Mb 20km sm FX SC connectors

***New* PI6KP6-RJSSCL** "4+2" port PoE module for 6ks with 48vdc PS, w/four PoE power source and two 100 Mb 40km sm FX SC connectors

***New* PI6KP6-RJ10ST** "4+2" port PoE module for 6ks with 48vdc PS, w/four POE power source and two 10 Mb 2km sm FL ST connectors

GarrettCom, Inc. reserves the right to change specifications, performance characteristics and/or model offerings without notice.

2.0 Introduction

2.1 Inspecting the Package and Product

Examine the shipping container for obvious damage prior to installing this product; notify the carrier of any damage that you believe occurred during shipment or delivery. Inspect the contents of this package for any signs of damage and ensure that the items listed below are included.

This package should contain:

1 Magnum 6K25e Managed Fiber Switch, base unit
(configured with user-selected port module options)

1 AC Power Cord (U.S. and other 115 VAC only)

1 Set of metal "Ears" for 19" rack mounting

1 Installation and User Guide (this manual)

1 Product Registration Card

Remove the items from the shipping container. Be sure to keep the shipping container should you need to re-ship the unit at a later date. To validate the product warranty, please complete and return the enclosed Product Registration Card to GarrettCom, Inc. as soon as possible.

In the event there are items missing or damaged, contact the party from whom you purchased the product. If the unit needs to be returned, please use the original shipping container if possible. Refer to Section 6, Troubleshooting, for specific return procedures.

2.2 Product Description - Magnum 6K25e Managed Fiber Switch

The Magnum Managed Fiber Switch boosts the performance of large Ethernet LANs, typically serving as a "backbone" switch. It has the flexibility to handle a mix of both fiber and twisted-pair switched ports along with Gigabit backbone port options. Industry-standard IEEE 802.1p QOS prioritization is included, providing high performance switching services for both "smooth" streaming and "bursty" data traffic.

The Magnum 6K25e has up to 25 ports capacity, all of which may be configured as fiber ports, but still offers a space-saving rack-mount chassis that is only 1U (1.70in. or 4.32cm) high. The "mixed-media" capability allows user selection of all popular flavors of fiber port connectors and modes, including even 10Mb fiber along with Gigabit ports. It also allows a mix of 10/100Mb RJ-45 (copper) ports and a fiber

Gigabit port in the same unit. This flexibility is achieved via a family of 6K25e port modules for copper and fiber-built-in (emphasizing Small Form Factor fiber for high fiber port density), 6-port modules for fiber and RJ-45 combinations, and 1Gb port module selections using GBICs. These modules can be factory configured in a base chassis unit (or may be changed in the field by trained technicians) to adapt the unit to the user's application and Ethernet cabling requirements. Even evolving mixed-media requirements for 10Mb and 100Mb fiber and copper as well as Gigabit ports can be handled by the Magnum 6K25e product.

The 6K25e managed switches also provides PoE option via Power-pass-through and power –inside PoE modules and allows the users to select a wide option of combo PoE modules to support 802.3af pd devices. See details in sec 5.2.10 and 5.2.11. The Power Sourcing Equipment (PSE), and are fully compatible with Powered Devices (PD)(e.g wireless access points, IP phones) that comply with the IEEE 802.3af PoE standard. The PoE switch ports have an auto-sensing algorithm, so that they provide power only to 802.3af, PoE end devices. **PoE is managed by a multi-stage handshake to protect equipment from damage and to manage power budgets** .The PoE ports will discontinue supplying power when the PoE powered devices are disconnected, and support the 802.3af PoE PSE standard for over-current protection, under-current detection, and fault protection.

The packaging and power-input options target the Magnum 6K25e at heavy-duty applications. The chassis mounting rack style may be "regular" (with the ports and LEDs in the front and the power input and management console connector in the rear) or "Reverse" (with the ports and LEDs and the power-input and the management console connector all in the rear and a duplicate set of LEDs in the front). Rack widths accommodated include standard 19" RETMA, ETSI, and 23" Telco. Input power may be AC, or –48VDC for Telco environments, or 24VDC for Industrial applications.

Designed for use in network traffic centers, the Magnum 6K25e Managed Fiber Switches are easy to install and use. Addresses of attached nodes are automatically learned, maintained and aged out, adapting the switching services to network changes. LEDs provide status information on each port. The Magnum 6K25e provides high performance plug-and-play hardware operation, 802.1p packet prioritization in hardware, and industry-standard managed networks software functionality, all in convenient 1U rack-mount packages.

2.2.1 Magnum 6K25e and 6K25eR chassis

The Magnum 6K25e is a 19" rack-mountable Ethernet Switch with three eight-port slots (A, B, and C) and one Gb-only slot (D) for configuration flexibility. Slots A, B and C may be configured with any of a large selection of fiber and copper port types and combinations of types, typically eight ports per module, but sometimes 6 or 4 ports or even one Gb port. Slot D may be configured with a Gb module that accepts GBICs. The port types configurable using the 4 slots allows the 6K25e to efficiently serve a large variety of applications, especially using fiber media. The Magnum 6K25e port modules are normally factory installed, but may be changed or added in the field. (See Section 5)

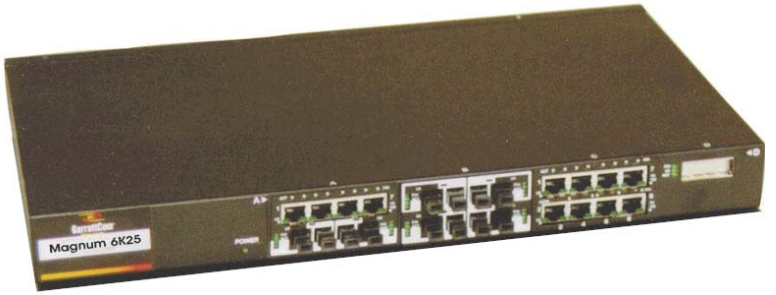

Figure 2.2.1a: "Regular" 6K25e front view, configured for 24 +1 Gb ports

Status LEDs are part of each port module and are viewable when connecting the Ethernet media. A "regular" rack-mount 6K25e is shown in Figure 2.2.1a. On "Reverse" rack-mount models, there is a duplicate set of LEDs on the other (front) side for normal status viewing from that direction. Of course, with management, the port status data is also available in software.

2.2.2 Eight-port SFF fiber modules (6K8-MTRJ, 6K8-MLC), 100Mb fiber

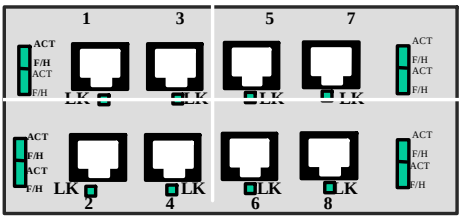

Fig.2.2.2 :
SFF Fiber Port Modules,
6K8-MTRJ (to the left) and
6K8-MLC or -SLC (below)

In an eight-port SFF fiber port module, all of the fiber ports are of the same speed (100Mb), mode, and connector type. Models are available with Small Form Factor (SFF) are multi-mode MT-RJ or LC-type connectors, and single-mode LC-type connectors.

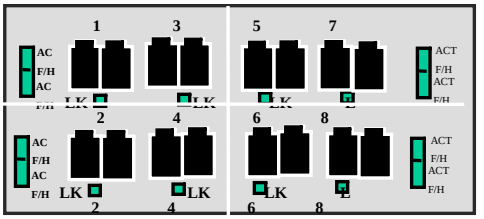

The 100Mb fiber eight-port modules for the Magnum 6K25e's normally are set (factory default) to operate in full-duplex mode for best fiber distance and performance. Using the 6K25e's MNS software, the user may select full- or half-duplex mode per-port through set-up of the software (See Magnum 6K25e MNS Software Manual) for the flexibility to adapt to any FDX or HDX type of Fast Ethernet devices).

There are three LED's per fiber port. The Link (LK) LED indicates "ready for operation" on that port when lit, the F/H LED indicates operation in full-duplex mode when ON (half-duplex when OFF), and the blinking ACT LED indicates receiving Activity on the port. A fiber cable must be connected into a SFF port and the Link (LK) indicator for that port must be ON (indicating there is a powered-up device at the other end of the cable) in order for a LK LED to provide valid indications of operating conditions on that port.

2.2.3 Eight-Port Copper Module, 6K8-RJ45

The 6K25e-Series's 8-port Copper port module, model 6K8-RJ45, provides eight 10/100Mb switched RJ-45 ports. The 10/100Mb switched ports normally (as a default setting) are independently N-way auto-negotiating, and auto-crossover(MDIX) for operation at 10 or 100Mb speed in full- or half-duplex mode, i.e., each independently selects a mode and speed to match the device at the other end of the twisted pair cable.

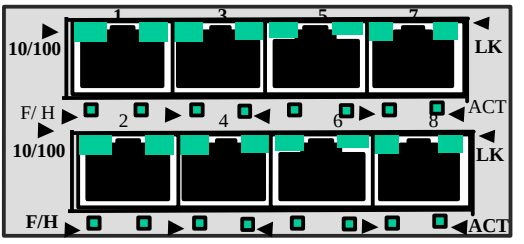

(See Section 4.3 for auto-negotiation and MDIX details). The auto-crossover feature will automatically determine the other side of connection to make the connection, and

eliminate the need of cross-over cable.

On the model 6K8-RJ45 module, there are four LEDs for each port, two in the connector and two separate. The LK (Link) LED indicates "ready for operation" on that port when lit. The blinking ACT (Activity) LED indicates receiving Activity on that port when lit. The 10/100 LED indicates operation at 100Mb speed when ON and at 10 Mb speed when OFF (when auto-negotiation is not disabled). The FDX/HDX LED is ON to indicate full-duplex operation and OFF to indicate half-duplex mode. A twisted pair cable must be connected into an RJ-45 port and the Link (LK) indicator for that port must be ON (indicating there is a powered-up device at the other end of the cable) in order for a LK LED to provide valid indications of operating conditions on that port.

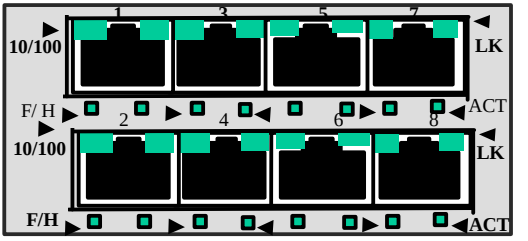

Using the 6K8-Series (MNS-6K) management software, the user may disable auto-negotiation and fix the desired operation of each RJ-45 port. User may select 10Mb or 100Mb speed and full- or half-duplex mode per-port as per user requirement. (See Magnum MNS-6K Software Manual for details info.).

2.2.4 *New* PoE(Power Inside), model PI6KP8-45RJ (MDIX), 10/100Mb 8-port

The *New* PoE RJ-45 ports act similar to regular RJ-45 ports, except they have capability of providing power on each port to power up the PD devices, per the IEEE802.3af PoE standard. Only 4 x RJ-45 (10/100) ports maxm. support POE(Power Inside) option in one rack mounted 6K-unit. The power inside PoE option is factory configured and equipped with the necesasary power option to support four 802.3af PoE pd devices. The 4-RJ45 POE module are also available with mix –n-match with fiber modules. Please check the

6KP8-45RJ

8 Port@ 10/100Mb Copper ports

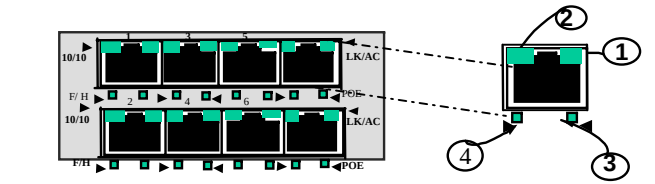

1 LK/ACT LINK 2 10/10

3 PoE 4 FULL/HALF

ordering information Sec.1.2. for all the various PI6K PoE modules option.

The LEDs on 6KP8-RJ45- PoE module are slightly different compared to regular (non-PoE) RJ-45 modules as shown in Fig 2. When the PoE port is in use, the PoE LED is ON when connected properly to a 803.af compliant PD device on that port. When non-PoE devices are connected, the PoE LED is OFF. Operation of Ethernet data traffic is not affected by PoE.

LINK and ACTIVITY LEDS are combined on the PoE modules into one LED that is marked as LINK/ACT, as shown in the diagram.

2.2.5 *New* PoE(Power Pass-through), model P6KP8-RJ45 (MDIX), 10/100Mb 8-port

The PoE (Power-pass-through) RJ-45 ports act similar to regular RJ-45 ports, except they have capability of providing power on each port to power up the PD devices, per the IEEE802.3af PoE standard. The Power Pass-through PoE modules are totally dependent upon the powerful -48VDC input power supply to support more RJ-45 (10/100) ports. Each port requires atleast 15watts to power up the PoE PD devices. Maxm. one PoE modules can be configured in the A, B or C slot of any 6K s with -48vdc power input. The PoE modules are also available with mix –n-match with fiber modules. Please check the ordering information Sec.1.2 for all the various P6K PoE modules option.

6KP8-45RJ

8 Port@ 10/100Mb Copper ports

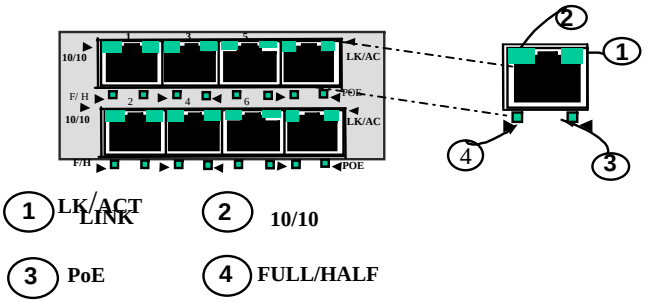

The LEDs on 6KP8-RJ45- PoE module are slightly different compared to regular (non-PoE) RJ-45 modules as shown in Fig 2. When the PoE port is in use, the PoE LED is ON when connected properly to a 803.af compliant PD device on that port. When non-PoE devices are connected, the PoE LED is OFF. Operation of Ethernet data traffic is not affected by PoE.

LINK and ACTIVITY LEDS are combined on the PoE modules into one LED that is marked as LINK/ACT, as shown in the diagram.

2.2.6 Six-Port “4 + 2”Combo Modules, 4@ 10/100 RJ-45 and 2@100Mb fiber 4@RJ-45 + 2@ 100Mb ST or SC

The combo six-port modules are combinations of copper and fiber media, available as four 10/100 switched RJ-45 copper ports and two 100Mb switched multi-mode fiber ST, SC or single mode SC or Long Reach SC ports. For ports numbering, ports 1,3,5,7 are copper, ports 2 and 6 are fiber, ports 4 and 8 are not present.

The four RJ-45 ports operate just like the 8-port copper module with auto-cross

(MDIX) feature to eliminate the use of cross-over cable, and the two fiber ports operate at 100Mbps full-duplex (default). User mode control per port through the MNS software is also the same.

On Magnum "4+2" Combo modules, there are four LED's for each RJ-45 port, which indicate status the same as described for the 6K8-RJ45 in Section 2.2.3 above. The fiber port's LEDs indicate status the same way as described for the SFF fiber modules in Section 2.2.2 above. Color-coding on the panel of the module shows which LEDs belong to which port.

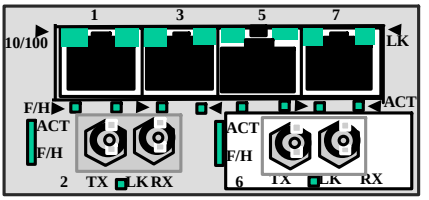

The Magnum Combo six-port modules are also available with 4@ MTRJ 100Mb mm SFF fiber and 2@10Mb fiber mm ST ports, and with 4@ RJ45 10/100 copper and 2@10Mb fiber mm ST ports. The

4@ RJ-45 + 2@ 10 Mb ST operation of the SFF fiber and the RJ-45 half of the module is as described for those port types above. For detailed information about 10Mb mm ST fiber half of the module, see Section 2.2.5.

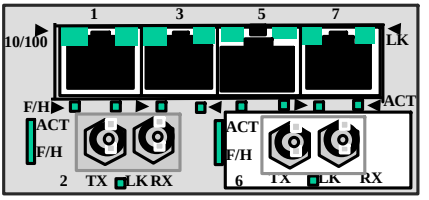

The Magnum Combo six-port modules are also available with 4@ MTRJ 100Mb mm SFF fiber and 2@10Mb fiber mm ST ports, and with 4@ RJ45 10/100 copper and 2@10Mb fiber mm ST ports. The **4@ RJ-45 + 2@ 10 Mb ST** operation of the SFF fiber and the RJ-45 half of the module is as described for those port types above. For detailed information about 10Mb mm ST fiber half of the module, please check section 2.2.5.

2.2.7 Four-Port 10 Mb mm Fiber ST Modules

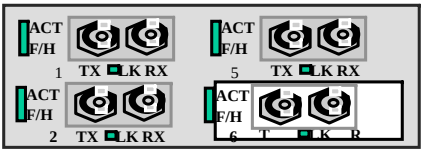

The 4port @10Mb ST fiber modules behave the same as the 8@100Mb ST

fiber modules except for the 10Mb speed. For ports numbering, ports 1, 2, 5, 6 are present, ports 3, 4. 7, 8 are not present. The default setup on the 10Mb fiber module is half-duplex, which allows the Magnum 6K25e Switch to connect to any 10Mb hub or media converter or almost any other device with a 10Mb fiber Ethernet port. User mode control per port through the MNS software is the same as the other 6K25e modules. The fiber ports support fiber cabling distances according to the 10BASE-FL standard, i.e., 2km distance for multi-mode fiber. (Single-mode for up to 10Km distance may be available as a special order configuration).

2.2.8 Gigabit (1000Mbps) port modules

The Magnum 6K25e offered a wide option Gigabit speed with multiple choice for the modular slot. While up to two Gigabit modules (maxm.) can be configured in the modular slot. The Gigabit port option for the modular slot comes in couple of different configuration. The Giga port has been offered as single Gigabit module comes in flavor of G+4(10/100 RJ-45 ports) or G+2 (100Mb fiber ports) as shown below .

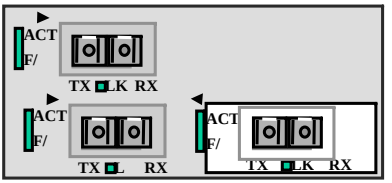

1@ 1000Mb Fiber SC + 2@ 100Mb SC

The 6K25e Modules provide a GBIC opening for insertion of industry-standard GBICs to provide Gigabit (Gb) media flexibility. GBIC models are available for both multi-mode (550m) and single-mode (10, 25, 40, 70)km fiber options, and for Gigabit copper as well, with new models appearing often.

The 1000Mb Gigabit fiber-port modules on the Magnum 6K25es are normally set (factory default) to operate at AUTO mode for best fiber distance and performance. The 1000Mbps SC fiber-optic module on the Gigabit -SX and Gigabit-LX transceivers are compatible with the IEEE 802.3z Gigabit standards.

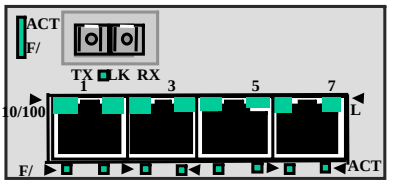

1@ 1000Mb Fiber SC + 4@10/ 100Mb

There are two LEDs mounted on each Gigabit port module. The Gigabit fiber port is by default configured at AUTO mode, and can be fix at 1000Mbps speed full-duplex mode at any times and has LEDs that indicate LK (Link status) and ACT (receiving activity) on that port when lit.

2.2.9 Packet Prioritization, 802.1p QOS

Quality of Service means providing consistent predictable data delivery to users from datagram paths that go all across a network. As a LAN device, the Magnum 6K25e can do its part to prevent any QOS degradation while it is handling Ethernet traffic through its ports and buffers.

The Magnum 6K25e switching hardware supports the IEEE 802.1p standard and fulfills its role in support of QOS, giving packet processing priority to priority tagged packets according to the 802.1p standard. In addition to hardware support for QOS, the MNS software (R2) supports two priority queues that can be shared across the eight levels of defined packet priorities for application-specific priority control by the user through software configuration settings.

2.2.10 Frame Buffering and Flow Control

Magnum 6K25e's are store-and-forward switches. Each frame (or packet) is loaded into the Switch's memory and inspected before forwarding can occur. This technique ensures that all forwarded frames are of a valid length and have the correct CRC, i.e., are good packets. This eliminates the propagation of bad packets, enabling all of the available bandwidth to be used for valid information.

While other switching technologies (such as "cut-through" or "express") impose minimal frame latency, they will also permit bad frames to propagate out to the Ethernet segments connected. The "cut-through" technique permits collision fragment frames (which are a result of late collisions) to be forwarded which add to the network traffic. Since there is no way to filter frames with a bad CRC (the entire frame must be present in order for CRC to be calculated), the result of indiscriminate cut-through forwarding is greater traffic congestion, especially at peak activity. Since collisions and bad packets are more likely when traffic is heavy, the result of store-and-forward operation is that more bandwidth is available for good packets when the traffic load is greatest.

When the Magnum 6K25e Switch detects that its free buffer queue space is low, the Switch sends industry standard (full-duplex only) PAUSE packets out to the devices sending packets to cause "flow control". This tells the sending devices to temporarily stop sending traffic, which allows a traffic catch-up to occur without dropping packets. Then, normal packet buffering and processing resumes. This flow-control sequence occurs in a small fraction of a second and is transparent to an observer. Another feature implemented in Magnum 6K25e Switches is a collision-based flow-control mechanism (when operating at half-duplex only). When the Switch detects that

its free buffer queue space is low, the Switch prevents more frames from entering by forcing a collision signal on all receiving half-duplex ports in order to stop incoming traffic.

2.2.11 Managed Network Software (MNS-6K) for Magnum 6K25e-Series

Magnum 6K25e's come with Rel3.7 licensed MNS-6K software, which allows the user to configure the Magnum 6K25e as a Managed Switch and implements security features and other software enabled features.

(NOTE: Magnum 625e managed switch will work with Rel 3.7 firmware or higher version only, using any other MNS-6K version will not support the 6k25e hardware)

For additional information about MNS-6K, see the Magnum MNS-6K **Software User guide** in pdf format, a separate document normally accessible via your web-browser, at ftp://ftp.garrettcom.com/

or FTP client program at ftp.GarrettCom.com using

user : m6kuser

password : m6kuser

All MNS-6K software information, including new releases and upgrades related to MNS-6K software, can be accessed and download from GarrettCom's FTP site.

Alternatively, for the latest documentation and information, or needed GarrettCom's MIBs for SNMP, visit **www.GarrettCom.com/techsupport/index.htm#software** and look for the Magnum MNS-6K info.

For interactive training software which shows basic and advanced info about the Magnum MNS-6K management software and for a useful tool for first time users, visit **Magnum MNS-6K Operator Training**.

You may also email: info@GarrettCom.com for further information.

2.3 Features and Benefits

- **Managed switching for high performance Ethernet LANs**

  Magnum 6K25e Switches provide non-blocking (all ports can run at full speed at once) performance with standard Managed Networks Software (MNS-6K) included. They are typically used in LAN traffic centers with eight Gigabit ports or 16 to 24 100Mb ports and one or 2 Gigabit ports for backbone connections, where managed network services are desired.

- **Switching services includes 802.1p QoS packet prioritization**

  The Magnum 6K25e switching hardware supports QoS, giving packet processing priority to priority tagged packets according to the IEEE 802.1p standard. For port- and application-specific priorities, the QoS software may be configured by the user.

- **Features Fiber-Built-In**

  Magnum 6K25e Managed Fiber Switches are designed to naturally include fiber ports, and support mixes of multi-mode and single-mode; 10 Mb, 100Mb and 1000Mb speed; full-and half-duplex; classic Small Form Factor (SFF) and GBIC fiber connectors. RJ-45 10/100 ports can also be configured in the mix of port types.

- **Modular design for port flexibility, in a 1U space-saving rack-mount package**

  The 1U Magnum 6K25e chassis has 4 slots for port configurations. Family of 4, 6 or 8 port modules allow the user to select the desired mix of port types & speeds. The port modules are normally factory installed and tested, but may be changed in the field.

- **Rack-mounting may be standard or "reverse", 19 inch or ETSI or 23" Telco**

  The standard rack mounting provides Ethernet ports and status LEDs in front, service connections (power input and management console) in the rear. "Reverse" rack mounting provides status LEDs in front and all cabling connections in the rear. Standard 19' rack mount brackets are included, with ETSI and 23" Telco optional.

- **Standard AC power input, -48VDC or 24VDC or 125VDC input is optional**

  Standard AC power input is IEC plug, auto-ranging for worldwide use. For special applications, models with –48VDC or 24VDC or 125VDC are available. Dual Source DC input can also be selected and configured on the DC power input models.

- **Heavy-duty design for Industrial Ethernet and extended temperature operation.**

  Fiber ports take more power than copper ports, but the Magnum 6K25e design provides for this with heavy-duty components. The ambient temperature can be up to 55°C.

- **NEBS and ETSI tested and certified**

  The 6K25e has been tested and certified for NEBS and ETSI. Request test reports.

- **MNS-6K licensed Network Management Software included, S-Ring optional**

  Release 3.7 (Fall '07) includes SNMP Switch Management with secure access control, RMON, CLI, Port Security; Port Mirroring; Port Settings Control; Telnet, TFTP, FTP support, Spanning Tree Protocol, RSTP, Web-based, multi-level QoS, Port- and tag-based VLANs, GVRP, IGMP Snooping, SNMPc GUI support; Event Log; SNTP

client for time-of-day; BootP and DHCP client for IP configuring, and password security. Supplied and updated via Internet and GCI FTP Server.

- **RJ-45 ports are MDI/MDIX supported**

  The RJ-45 modules are equipped with MDI/MDIX capability to eliminate the use of cross-over cable. The Auto-MDIX capability allow the Magnum 6K25e to cascade any Hub, switches or media converters with normal straight cable.

- **SFP Gigabit module being supported on Slot D**

  Due to design constrains, Slot D will be populated With either Dual SFP Giga or Dual RJ-45 Gigabit, or combo of both. No GBIC module will be supported on Slot D.

- **6k25e hardware are compatible with Rel. 3.7 or higher MNS-6K firmware**

  The 6K25e managed switch must be loaded with Rel 3.7 or higher Firmware, in order to work efficiently. Any lower version might cause problem on hardware.

- **Maxm. 8 Gigabit ports can be populated on 6K25e managed switch**

  The modular Gigabit fiber switch can be populated with maxm. Gigabit ports, where Slot D must have either Dual SFP OR Dual copper or COMBO of the one each..

2.4 Applications

Magnum 6K25e Fiber Switches offer high performance and modularity. They provide the flexibility of 100Mbps fiber and copper ports as well as Gigabit ports, with industry-standard LAN management software. Magnum 6K25e Switches are easily used in a variety of applications including MANs (metropolitan area networks) client/server computing, secure VLAN- performance upgrades to departmental networks, and LAN traffic centers require Gb backbone services. The performance characteristic of the 6K25e Switches enables them to inter-connect a series of subnets (one subnet per 6K25e Switch port) in a LAN traffic center. The subnet connections may be via fiber or twisted pair cabling, 100Mbps or 10 Mbps speed, and full-or half-duplex mode.

The mixed-media capability is ideal for upgrading existing Ethernet LAN networks where existing cabling must be accommodated. The fiber-built-in media capability is ideal for integrating future-proof fiber cabling into the LAN structure.

Example 1. In a Telecommunications storage data application, a secure managed switch is required to provide an Ethernet backbone for a diversified network with multiple subnets. The backbone consists of high speed LAN segments supported by 1000Mbps full-duplex future-proof fiber media to provide secure long distance LAN connections. The entire network is sharing a higher bandwidth Gigabit-enabled data-mining server for the vital database located in a separate secured building. The copper ports are required for multiple subnets inside the building. The entire spread network is managed to provide easy, detectable, uninterrupted support through a viewable SNMP monitor.

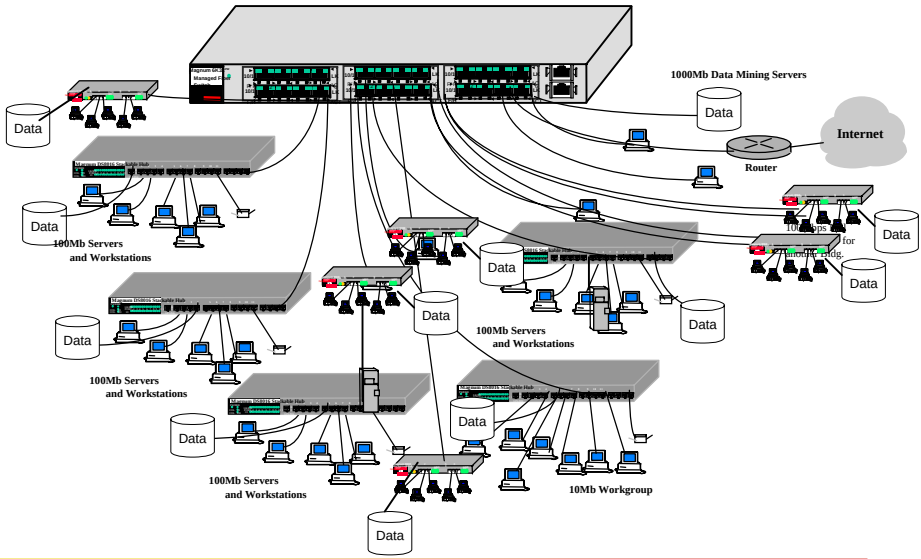

The Magnum 625e Managed Switch equipped with copper and optional dual Gigabit fiber ports on modular slots provide an economical and seamless solution to the requirements. The user-configurable Magnum 6K25e provides an extra boost to the network requirements by providing copper/fiber media along with the higher bandwidth

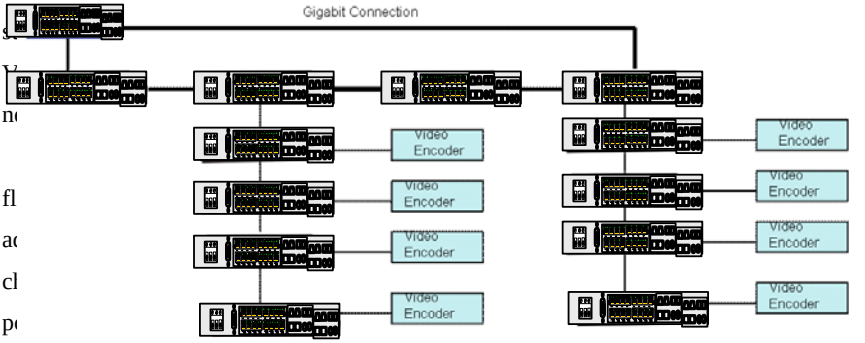

6K32TRC with IGMP-L2 mode

traffic and minimize congestion.

Example 2: In a " (video+data)" application where a network being designed to catered the need of multicast streaming and broadcast traffic of higher bandwidth to provide a video conferencing and video in demand channel option to the user.

The Magnum 6K25e with four slots might filled with 8 Gigaport module and a robust management firmware with MNS-6K qualify this requirement efficiently. The *New* IGMP L2-Mode feature on Magnum 6K25e and loaded with management capability and secure web feature fulill this requirement effectively.

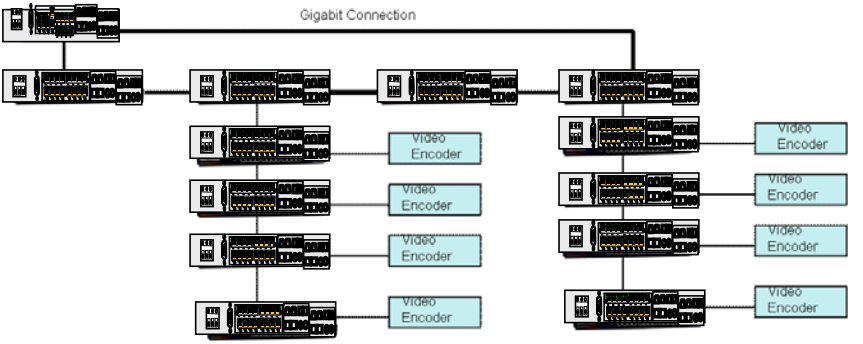

6K25e with IGMP-L2 mode

The Dual Giga option on each of the two slot add 4 Gigaport to handle the bandwidth requirement and 16 10/100 RJ-45 ports to feed the other needs of equipment connected to the 6K25e. The robust Tag based vlan feature will able to segregates different ports belong to one group and provide an effective solution for bandwidth. The SNMP option and secure web based will allow the remote capability and monitoring the network securely. The versatile mechanical design with rack mounting capability and AC/DC option will be an additional feature to take care of temperature and power option issue.

Equipped with IGMP-L2 mode enhanced features allow the Magnum 6K25e to meet the fastest growing application of video monitoring or video surveillance demand of industry and provide an economical and effective solution to meet that expectation.

3.0 Installation

Before installing the equipment, it is necessary to take the following precautions:

1.) If the equipment is mounted in an enclosed or multiple rack assembly, the environmental temperature around the equipment must be less than or equal to 50°C.

2.) If the equipment is mounted in an enclosed or multiple rack assembly, adequate airflow must be maintained for proper and safe operation.

3.) If the equipment is mounted in an enclosed or multiple rack system, placement of the equipment must not overload or load unevenly the rack system.

4.) If the equipment is mounted in an enclosed or multiple rack assembly, verify the equipment's power requirements to prevent overloading of the building/s electrical circuits.

5.) If the equipment is mounted in an enclosed or multiple rack assembly verify that the equipment has a reliable and uncompromised earthing path.

6.) 24vdc, -48vdc, and 125vdc must be installed in restricted access locations.

7.) CB-Circuit breakers of 10Amps should be shown on top of the Rack.

This section describes installation of the Magnum 6K25e Switches, as well as connection of the various Ethernet media types.

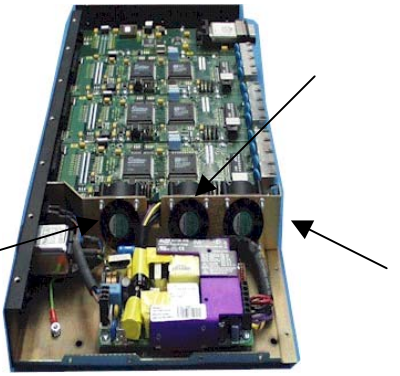

3.1 Locating Magnum 6K25e Switches

The location of a Magnum 6K25e Switch is dependent on the physical layout of the network. Typically the Switch is placed in a central wiring location where groups of network devices need to be connected in order to communicate with each other. These Switches are typically rack mounted in a wiring closet see Section 3.3.2 below), but because they have rubber feet they can also be installed on a shelf or table top unit. The compact size allows it to be easily placed in an office or lab area, and it can also be either shelf of wall-mounted (see Section 3.3.1 below). **Figure 3.1: Location of the Magnum 6K25e's cooling fans**

Locate an AC receptacle that is within six feet (2 meters) of the intended Magnum 6K25e site. The rugged metal case of the Magnum 6K25e will normally protect it from accidental damage in a lab or workplace setting. Maintain an open view of the front to visually monitor the status LEDs. Keep an open area around the unit so that cooling can occur from the small fan on the left side, while the unit is in operation. See figure below.

3.2 Connecting Ethernet Media

The Magnum 6K25e Switches are specifically designed to support all standard Ethernet media types within a single Switch unit. This is accomplished by using a family of different port Modules which can be individually selected and configured per-port. See Section 2.4 for a description of the PMs.

The various media types supported along with the corresponding IEEE 802.3 and 802.3u standards and connector types are as follows:

IEEE Standard	Media Type	Max. Distance	Port Module
Fiber:			
100BASE-FX	mm[1] Fiber	220m (ft)	GBIC-SXSC
	sgl.m[2] Fiber	5Km	GBIC-LXSC
100BASE-FX	mm[1] Fiber	2.0km (6,562 ft)	6K6-MSC, -MST
	sgl.m[2] Fiber	18.0km (95K ft)	SSC, SSCL
small form factor	mm[1] Fiber	2.0km (6,562 ft)	6K8-MTRJ, -MLC
small form factor	sgl.m[1] Fiber	15 km	6KP8- SLC
Copper:			
10BASE-T and 100BASE-TX twisted pair		100m (328 ft)	6K8-RJ45

[1] mm = multi-mode [2] sgl.m = single-mode

3.2.1 Connecting Fiber Optic ST-type, "twist-lock"

The following procedure applies to installations using a PM with ST-type fiber connectors. This procedure applies to ports using a 6K25e module, MST-type port.

1. Before connecting the fiber optic cable, remove the protective dust caps from the tips of the connectors on the PM. Save these dust caps for future use.

2. Wipe clean the ends of the dual connectors with a soft cloth or lint-free lens tissue dampened in alcohol. Make certain the connectors are clean before connecting.

   Note: ***One strand of the duplex fiber optic cable is coded using color bands at regular intervals; you must use the color-coded strand on the associated ports at each end of the fiber optic segment.***

3. Connect the Transmit (TX) port (light colored post) on the Magnum PM to the Receive (RX) port of the remote device. Begin with the color-coded strand of the cable for this first TX-to-RX connection.
4. Connect the Receive (RX) port (dark colored post on the PM) to the Transmit (TX) port of the remote device. Use the non-color coded fiber strand for this.
5. The LINK LED on the front of the PM will illuminate when a proper connection has been established at both ends (and when power is ON in the unit). If LINK is not lit after cable connection, the normal cause is improper cable polarity. Swap the fiber cables at the PM connector to remedy this situation.

3.2.2 Connecting Fiber Optic SC-type, "Snap-In"

The following procedure applies to installations using a PM with SC-type fiber connectors, i.e., using 6K-MSC, 6K-SSC single-mode.
When connecting fiber media to SC connectors, simply snap on the two square male connectors into the SC female jacks of the 6KPM until it clicks and secures.

3.2.3 Connecting Single-Mode Fiber Optic

When using single-mode fiber cable, be sure to use single-mode fiber port connectors. Single-mode fiber cable has a smaller diameter than multi-mode fiber cable (9/125 microns for single-mode, 50/125 or 62.5/125 microns for multi-mode where xx/xx are the diameters of the core and the core plus the cladding respectively). Single-mode fiber allows full bandwidth at longer distances, and may be used to connect 10 Mb nodes up to 10 Km apart, or 18Km with the 6K-SSC.

The same procedures as for multi-mode fiber applies to single-mode fiber connectors. Follow the steps listed in Section 3.2.2 above.

3.2.4 Connecting Twisted Pair (RJ-45,CAT3, CAT5, Unshielded or Shielded)

The RJ-45 ports of the Magnum 6K25e can be connected to the following two media types: 100BASE-TX and 10BASE-T. CAT 5 cables should be used when making 100BASE-TX connections. When the ports are used as 10BASE-T ports, CAT 3 may be used. In either case, the maximum distance for unshielded twisted pair cabling is 100 meters (328 ft).

Media	IEEE Standard	Connector
Twisted Pair (CAT 3, 4, 5)	10BASE-T	RJ-45
Twisted Pair (CAT 5)	100BASE-TX	RJ-45

NOTE : *It is recommended that high quality CAT. 5 cables (which work for both 10 Mb and 100Mb) be used whenever possible in order to provide flexibility in a mixed-speed network, since dual-speed ports are auto-sensing for either 10 and 100Mb/s.*

The following procedure describes how to connect a 10BASE-T or 100BASE-TX twisted pair segment to the RJ-45 port. The procedure is the same for both unshielded and shielded twisted pair cables.

1. Using standard twisted pair media, insert either end of the cable with an RJ-45 plug into the RJ-45 connector of the port. Note that, even though the connector is shielded, either unshielded or shielded cables and wiring may be used.
2. Connect the other end of the cable to the corresponding device
3. Use the LINK LED to ensure proper connectivity by noting that the LED will be illuminated when the unit is powered and proper connection is established

NOTE: for Power Substations: *In support of the IEEE 1613 Class 2 standard, GCI advises that, for substation applications, the RJ-45 ports are intended for connectivity to other communication equipment such as routers or telecommunication multiplexers installed in close proximity (i.e., less than 2 meters or 6.5ft) to the 6K25e. It is not recommended to use these ports in substation applications to interface to field devices across distances which could produce kigh (greater than 2500V) levels of ground potential rise (GPR) during line-to-ground fault conditions. The 6K25e passes the 1613specifications for zero packet loss with fiber ports & with RJ45 ports used as indicated here.*

3.2.5 Connecting Twisted Pair (CAT5E or better, Unshielded or Shielded)

The RJ-45 Gigabit ports of the Magnum 6K25e can be connected to the media types, 1000BASE-T or CAT 5E or better 100-ohm UTP or shielded twisted pair (STP) balanced cable. The CAT 5E or better 100-ohm UTP or shielded twisted pair (STP) balanced cable is recommended to use when making 1000BASE-TX connections. In either case, the maximum distance for unshielded twisted pair cabling is 100 meters (328 ft). See Section 4.3 for manual Up-Link switch on port 1 of copper port modules.

Media	IEEE Standard	Connector
Twisted Pair (CAT 5E)	1000BASE-T	RJ-45

NOTE : *It is recommended that high quality CAT. 5E cables (which work for both 100 Mb and 1000Mb) be used whenever possible in order to provide flexibility in a mixed-speed network.*

The following procedure describes how to connect a 1000BASE-T twisted pair segment to the RJ-45 port. The procedure is the same for both unshielded and shielded twisted pair cables.

1. 1000Base-T connections require that all four pairs or wires be connected. Insert either end of the cable with an RJ-45 plug into the RJ-45 connector of the port. Note that, even though the connector is shielded, either unshielded or shielded cables and wiring may be used.
2. Connect the other end of the cable to the corresponding device
3. Use the LINK LED to ensure proper connectivity by noting that the LED will be

illuminated when the unit is powered and proper connection is established

3.2.6 Gigabit SFP (Small Form-factor Pluggable) Optical Transceivers

The small form-factor pluggable (SFP) is a compact optical transceiver used in optical communications for both telecommunication and data communications applications. Due to its compact, hot pluggable characteristics, SFPs are becoming a very popular choice for various applications. The small-chassis Magnum 6KQ is designed for industry-standard Gb-SFPs and Gb-SFPCU (copper) for user selection of the SFP gigabit media type as desired.

All SFPs used in Magnum 6KQs are compliant with the industry standard Multi-Source Agreement (MSA) ensuring compatibility with a wide range of networking kit.

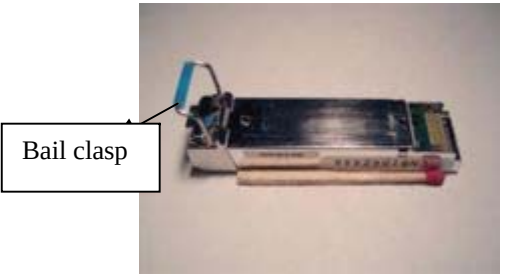

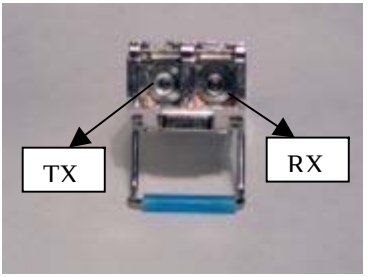

Side View ---Duplex LC connector -- Front view

Note: It is highly recommended to remove the fiber cable first before removing the SFP transceiver for any reason. Not removing the fiber cable first can damage the fiber cable, cable connector or optical interfaces. It is advised not to remove and insert a SFP transceiver frequently as this may shorten its useful life.

Note: Always use an ESD wrist strap while handling the SFP transceivers since the SFP modules are static sensitive devices.

Note: The copper 1000BASE-T SFP transceiver port supports 1000Mb only. It is recommended to use a straight-through RJ-45(4-twisted pair) connection while connecting to any Server/workstation. While connecting with any Switch/repeater or other device, it is recommended to use Crossover RJ-45 (4-twisted pair) category 5 or higher cabling. The maximum length supported on copper 1000BASE-T is 100mts (328 ft.).

The various SFPs transceivers supported by GarrettCom 6K25e, D slot are-

Module Model#	Gigabit
Slot D only for 6K25e	
6KE-2GSFP	2 SFP
6KE-2GCUSFP	1 CU, 1SFP
6KE-2GCU/1GCU	2 CU / 1 CU
6KE-1GSFP	1 SFP
GBPM-DOTX	1 GBIC
Gb SFP fiber optic transceivers	
SFP-SX	Gb SX, 850nm wavelength, 500 m distance
SFP-LX10	Gb LX, 1310nm wavelength, 10km dist
SFP-LX25	Gb LX, 1310nm wavelength, 25km distance
SFP-ZX40	Gb ZX, 1550nm wavelength, 40km distance
SFP-ZX70	Gb ZX, 1550nm wavelength, 70km distance

3.3 Table-Top or Shelf Mounting

The Magnum 6K25e Manageable Switches can be easily mounted on a table-top or any suitable horizontal surface, and has four rubber feet to provide stability without scratching finished surfaces.

3.3.1 Rack-mounting (for 19" RETMA racks), regular Magnum 6K25es

Installation of a Magnum 6K25e Fiber Switch in a 19" rack is a simple procedure. The units are 1U (1.70") high. When properly installed, the front-mounted LED status indicators should be in plain view and easy to read. Rack-mount installation requires special 19" rack-mounted brackets and screws (included with each Magnum 6K25e unit). These brackets attach to the front sides of the Switch (regular package, i.e., not the Reverse version), which is then typically fastened into a standard 19" RETMA rack as shown here.

The 23" brackets and the ETSI (European metric, approx. 21") brackets are also available (optional) for rack-mounting of Magnum 6K25e Switches. These brackets are popular in the Telco industry where they are a standard for Central Office rack-mounting purposes. The 23" and the ETSI brackets are mainly used for larger equipment

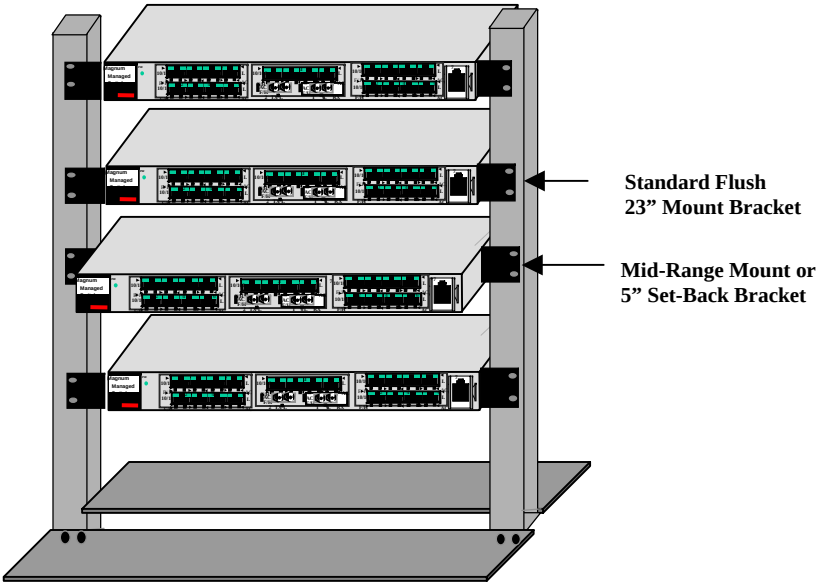

Fig 3.3.1 Mountings for Magnum 6K25e units rack-mounted in a frame

assemblies in rack-mounting frames where the rack-mount equipment is typically accessed in operation from both sides.

The bracket mounting holes in the sides of the Magnum 6K25e permits it to be mounted in various ways. The same holes fit all three types (19", ETSI, 23") of brackets. The mounting for the 23" is illustrated in Figure 3.3.1 below. The brackets may be attached flush with the front, or attached in the center for a set-back mounting which may reduce cabling torque.

The optional 23" brackets and the ETSI (21") brackets each come as a pair in a

package, along with the necessary screws for attaching the brackets to the sides of the Magnum Switch unit. They must be ordered as line items.

3.3.2 Rack-mounting, Reverse version of the Magnum 6K25es

The optional Reverse Magnum 6K25e Model has all of the cabling (Ethernet cabling, power cabling and console port cabling) connectors in the rear, and the status LEDs in the front. The status LEDs that are co-incident with the ports are still present there, and a second or dual set of LEDs are used for status visibility in the front of the unit, showing the same data.

There are three options of brackets available to mount in the standard 19" frame or the 23" frame or ETSI (21") frame. The 19" brackets are included with each unit, the other two may be purchased if desired.

With each bracket type, there are three different mounting options is shown in Fig. 3.3.2. The case of the Magnum 6K25e has mounting holes prepared for each of the mounting arrangements. Users may choose the mounting arrangement most suitable for their installation.

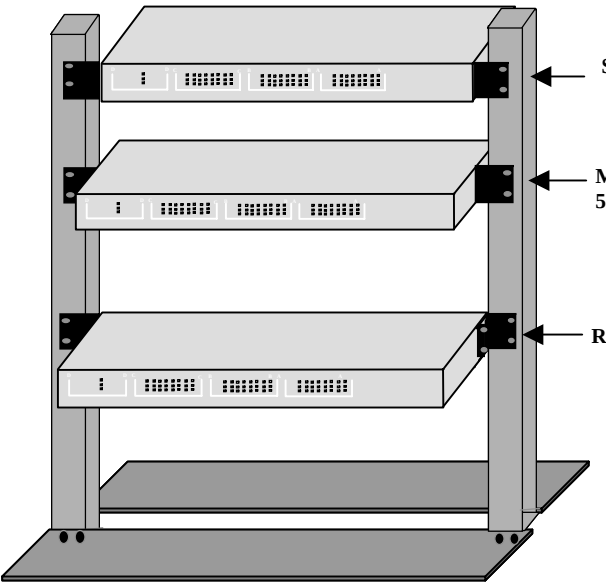

Fig 3.3.2 Reverse Magnum 6K25e units, rack-mounted in a frame

3.4 Powering the Magnum Managed Fiber Switch

The Magnum 6K25e Switches incorporate an internal universal power supply and have a recessed male IEC connector for the AC power cord at the left-rear. A manual power ON-OFF switch is adjacent. A six-foot 115 VAC 60 Hz standard power cord is supplied with each unit shipped within the United States and Canada.

The auto-ranging power supply supports installation environments where the AC voltage is from 90 to 260 volts with a power input frequency between 47 and 63 Hz. The 25-port units will consume over 20 watts of power typically. When connecting the

Ethernet cabling, there is no need to power down the unit. Individual segments can be connected or disconnected without concern for AC power-related problems or damage to the unit.

Power supply options are available to suit the 6K25e Switches to special high-availability communications and/or heavy industrial-grade applications, including:

* -48VDC, 24VDC and 125VDC with single DC input,
* -48VDC, 24VDC and 125VDC with dual-source DC input,

See the Appendices of this manual for more details. Use an RFQ for other variations.

3.4.1 Alarm Contacts for monitoring internal power, and Software Traps

The Alarm Contacts feature, optional on Magnum 6K25e's, provides two Form C Normally Closed (NC) contacts to which the user can attach two sets of status monitoring wires at the green terminal block. When this option is present, the terminal block for Alarm Contacts is part of the Power Input panel in the Magnum 6K25e case. The AC or DC power input connection is in the same panel. A manual On-Off Switch for power to the unit is not available on 6K25e units with the Alarm Contacts option, as these two features occupy the same space in the case.

The first NC Alarm Contact (top position) is a "Software Alarm", operated by user settings in the MNS-6K software. The user can disable the Software Alarm feature with a software configuration command if desired. When the Software Alarm is enabled, the Form C Normally Closed (NC) contact is held close during normal software operation. A user-defined software malfunction, such as an SNMP Trap or a Software Security violation or an S-Ring Fault, causes the contact to open and thus trigger an alarm in the user's monitoring system

The second (bottom position) NC Alarm Contact is held close when there is power on the main board inside of the 6K25e. This provides a "Hardware Alarm" because the NC contacts will open when internal power is lost, either from an external power down condition or by the failure of the power supply inside of the Magnum 6K25e Switch. Useful info. about Alarm contacts:

1. There is four terminal block (1,2,3,4)provided next to AC/DC power supply
2. The top two pins (1,2) are software operated
3. The bottom two pins (3,4) are hardware operated
4. By default it is NC (normally closed)
5. The software operation need to be enable and set to get the Alarm traps. For detail information about the Software Alarm and software control of SNMP alarm traps, please reference the Magnum MNS-6K Software User Manual. (Chapter 19th).

3.5 6K25e Port Module (6KPM) Installation

The Magnum 6K25e Switches are normally received from the factory with all required 6KPM modules installed. There may be situations where 6KPM cards need to be added or replaced. In cases where additional 6KPM cards are needed, the faceplate for an available front-mounted slot must be removed. The following procedure describes this operation.

3.5.1 Preparation for Installing and Removing 6KPMs

STOP!!!

Be sure the power cord and connections for all powers single or dual, is unplugged from the chassis before attempting to remove and/or replace any PM cards. Failure to do so may result in damage to the unit and will void the warranty.

Caution- Avoid Static Discharge: The port modules (like most electronic equipment) are sensitive to static discharge. Use proper ESD measures when handling port modules.

Step 1. Make sure the 6KPM Card package has all necessary accessories to install it properly. Each 6KPM Card package except the Gigabit, for field installation contains (Daughterboard (Bigger) and Granddaughter board (smaller), three 5/8 stand offs for Granddaughter board, six #4-40 Pan-Head screws along with Front panel face plate package. The Front panel faceplate package includes 3 retainer brackets and six #2-56 flat head screws.

NOTE: Every 6KPM Card package comes with their matching Daughter and Granddaughter board. The copper 6KPM card should not work properly if mixed with other Fiber combo 6KPM card packages. Always install the PM module separately one by one to avoid the mixing.

Step 2. Remove Chassis Cover

The Magnum 6K25e chassis are combined with top and bottom parts and

assembled together with the help of 22 Philips-head screws. There are 7 screws located on the front-bottom and rear-top of the unit and four screws each on the sides. Remove these screws. Once these are removed, the top cover is easily lifted off the chassis base. When the chassis top cover has been removed, the interior of the unit is exposed.

Figure 3.5.1a: Removing Chassis Cover

Caution: Be careful not to disturb the power supply.

Looking down into the Magnum 6K25e unit, notice that there are individual PM installation spaces and female latch(white) connectors provided on the main board along with four stand-off's for each 6KPM card position. (See Figure 3.5.1b).

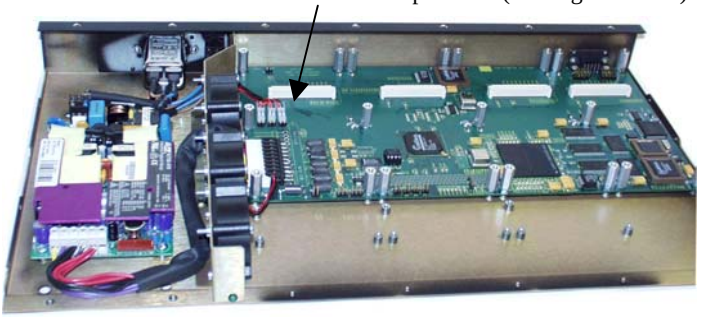

Figure 3.5.1b: Magnum 6K25e, Top view without chassis cover

Step 3. Remove front panel face plate retaining screws

There are four PM slots (A, B, C and D) located on the front of the chassis cover. Looking into the vertical placed Chassis cover of the unit, there are three brackets with retaining screws (#256 flat head) which hold each PM Face plate card slot securely. These six screws shown in the picture below are used to secure a PM face plate in position, but unscrew only four of the screws as shown in Fig. below. These screws are also used to secure the individual 6KPM cards screen plate which can be subjected to significant forces from the attached cables. (See Figure 3.5.1c)

Figure 3.5.1c: Top View – 6KPM retaining screws hold Face Plate

3.5.2 Installing 6KPM Cards in the Magnum 6K25e

Up to four front-mounted 6KPM cards may be installed in one Magnum 6K25e Managed Fiber Switch unit. Follow these steps to install a 6KPM.

Step 1. Remove top chassis cover. See procedure in Section 3.5.1 above.

Step 2. Placed Granddaughter board (as shown in fig. 3.5.2a and 3.5.2b) on the chassis built in stand off (female) provided at the front of the 6K25e Main Board and screw down tightly with the three 5/16 stand-off (male) on the top of the Granddaughter board The 5/16 stand off has been used to place the daughter board on the top of the granddaughter board and latch it securely.

Fig 3.5.2a Granddaughter Board shown separately

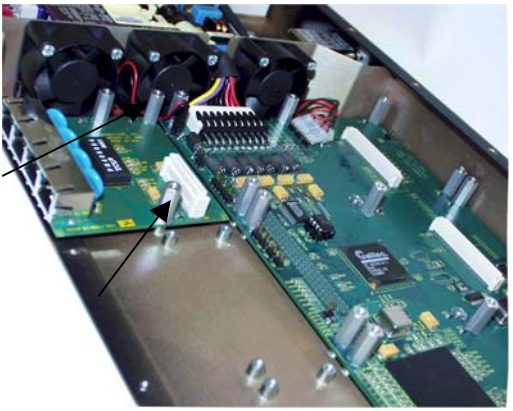

Fig 3.5.2b Granddaughter Board placed in slot A and secured with three 7/16 stand-off's

Step 3. The figure here illustrates the basic layout of an individual PM card. Each 6KPM card fits into the space provided on the main board.

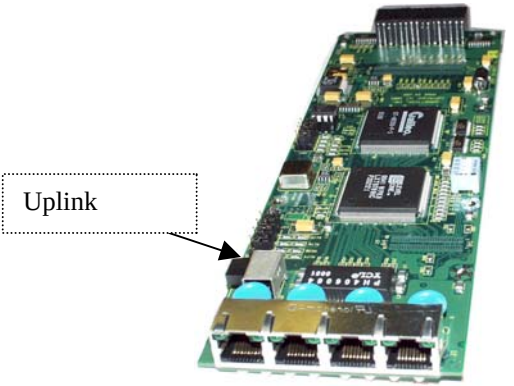

Fig. 3.5.2c Daughter Board, top view of version for 4 copper 10/100 ports. Port# 1 Can be configured as uplink (x) crossed ports for cascading as shown in the Fig.

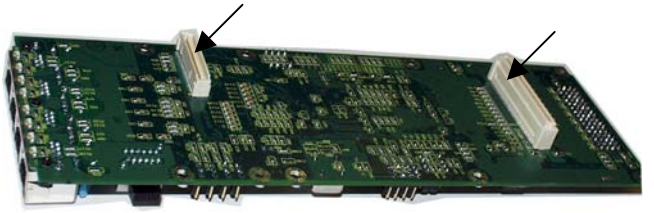

Fig 3.5.2d Daughter Board shown upside down with two male latch connectors

Step 4. Hold the daughter board with both hands at the end and align the two cream color latching connectors (male) placed at the bottom of the daughter board with the other female connector placed on the Granddaughter and main board. As shown below in Fig. 3.5.2e

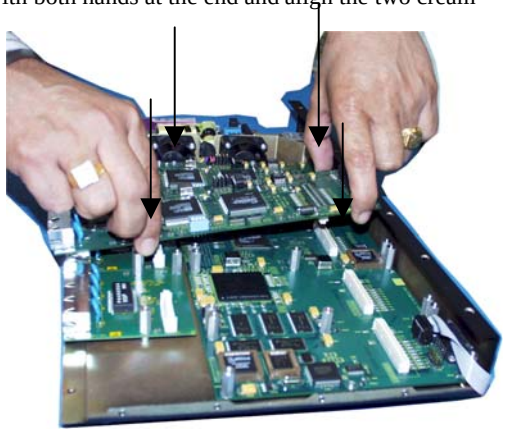

Fig. 3.5.2e Magnum 6KPM daughter board aligned with the bottom female connector for the installation

Step 5. Once the latching connectors are aligned properly and the mounting holes are aligned with stand offs then press slowly and firmly with two fingers (as shown below in Fig. 3.5.2f) on the top of the latching connectors until the connectors latched up securely.

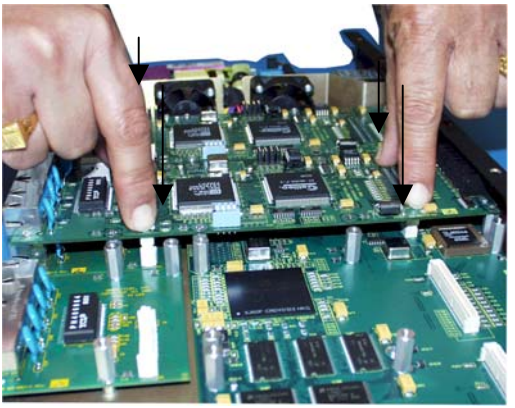

Figure 3.5.2f: Securely latching up 6KPM Cards into a Magnum 6K25e

NOTE: ***All 6KPM slots need not be filled in order for the Magnum 6K25e unit to be operational. When leaving 6KPM slots empty, always use a face plate (Magnum 6K8-BLNK) to cover the slot opening in the front panel. This will maintain proper cooling air flow, safety, and operation as required by FCC, CE, and other regulations.***

Step 6. Now screw down the daughter board with 6 #440 screws, so that it holds the daughter board securely. The figure below shows the top view of 6KPM card after successfully installing the 6KPM cards inside the Magnum 6K25e.

Fig. 3.5.2g Top View : 6KPM Module installed inside a 6K25e

Step 7. Once the installation of granddaughter and daughter modules is done, the front panel screen plates need to be placed on the front of the chassis cover to complete the installation process for that port module. The front panel screen plate comes along with the package of port module separately along with

brackets and 6 #256 flat head screws. The brackets and screws have been installed inside of the top cover as shown in Fig. 3.5.2h.

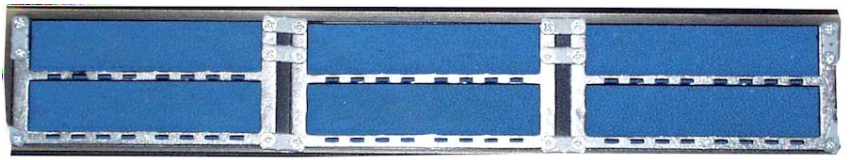

Fig. 3.5.2h Inside view of chassis cover (from the rear), showing the front panel screen plates installed inside the chassis cover using brackets and screws

Step 8. Once all 6KPM cards have been installed (including faceplates for empty slots), the chassis cover should be replaced. Make sure the chassis cover is aligned properly before securing the enclosure.

NOTE(Gigabit Module only): *The Gigabit port module installation on slot A, B and C COTX require four bracket extender for each(slot A, B, or C COTX). Attach the bracket from the PCA to the center standoff on the main mother board. The bracket provide the stability to the Gigabit module. The slot D can be configured with dual Gigabit SFP ordualRj-45 or dual combo of SFP & RJ-45 modules only.*

NOTE (Reverse mount Model): The Reverse model require a *LED Decal, (for checking the speed, F/H, and activity status)*

3.5.3 Removing 6KPM Cards

To properly remove a 6KPM card from the 6K25e Managed Fiber Switch, follow the 3 steps below.

Step 1. Remove chassis cover See procedures in Section 3.5.1 above.

Caution: Be sure the power cord is unplugged.

Step 2. Remove retaining screws placed on top for the 6KPM and Face Plate

On the top of the daughter module there are six retaining screws for each 6KPM card. These screws are used to secure a 6KPM card in position (see Figure 3.5.3a). Remove the three standoffs holding the Granddaughter board with the chassis. The screen faceplate screws out from the inside front of the chassis cover by loosening

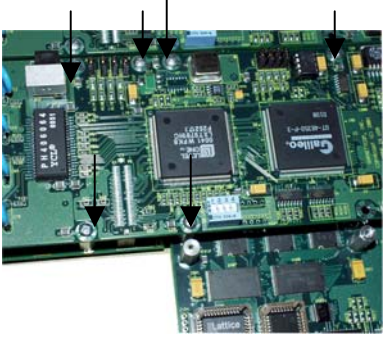

the 4 screws and bracket while holding it down firmly. **Figure 3.5.3a: Top View - 6 retaining s crews shown by arrows**

Step 3. Remove 6KPM Card

Carefully and gently pull out the daughter board from the latching connectors, using both hands, gripping the board near the latch-up connectors as shown in Fig. 3.5.3b . If the now empty slot is to remain unused, be sure to install a 6KPM-BLNK face plate cover**.**

Figure 3.5.3b: Removing a 6KPM Card

If another 6KPM card is replacing the one that has been removed, follow the steps as described for installing a 6KPM card discussed in Section 3.5.1.

3.6 Connecting the Console Terminal to Magnum 6K25e (Management)

Use a DB-9 "null modem" cable to connect the Magnum6K25e Console Port (the RS-232 port on the 6K25e Switch) to the your PC, so that your PC becomes the 6K25e's Console Terminal.

Note: The DB-9 cable does not include with the 6K25e unit package.

Rear View of Magnum 6K25e, (Typical Console Port is on the Rear of Reverse 6K25e Models)

Note: For detail description of Managed Network Software (MNS-6K) and Magnum 6K25e Switch configuration for Network Management, please refer to Magnum 6K25e Software Manual available on GarrettCom's FTP site. Detail info. about the MNS is available on 2.2.9 (see page no. 13) of this manual.

3.6.1 RS-232 (DB-9) Console Com port (Serial port) pin assignments.

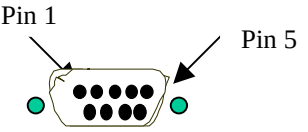

DB-9 (Console port connector)

Pin	Signal	Description
1	CD	Carrier detect (not used)
2	RXD	Receive Data (input)
3	TXD	Transmit Data (output)
4	open	not used
5	GND	Signal Ground
6-9	open	not used

The above provided information enables a managed station(a PC or Console terminal) to connect directly to the switch using a straight through cable.(Note: The Null-Modem (DB-9) cable is optional and can be order from the factory, along with the unit

NOTE for Power Substations: *In support of the IEEE 1613 Class 2 standard, GCI advises that, for substation applications, the serial RJ-45console ports are intended for temporary connectivity to other equipment such as PCs. Since the console port connection is temporary, it is excluded from IEEE 1613 packet-loss testing per the 1613 standard-defined test procedure.*

4.0 OPERATION

This chapter describes the functions and operation of the Magnum 6K25e Switch.

4.1 Switching Functionality

A Magnum 6K25e provides switched connectivity at Ethernet wire-speed among all of its ports. The Magnum 6K25e supports10/100Mbs for copper media and 10 or 100Mb separate traffic domains for fiber ports to maximize bandwidth utilization and network performance. All ports can communicate to all other ports in a Magnum 6K25e, but local traffic on a port will not consume any of the bandwidth on any other port.

Magnum 6K25e units are plug-and-play devices. There is no software configuring necessary to be done for basic operation at installation or for maintenance. The only hardware configuration settings are user options for an UP-LINK Switch (resides inside the unit) on the 6K8-RJ45. Optional Half / Full duplex mode and 10 or 100Mbps selection for the switched ports must be configured through MNS software per unit as per the requirement. The internal functions of both are described below.

Filtering and Forwarding

Each time a packet arrives on one of the switched ports, the decision is taken to either filter or to forward the packet. Packets whose source and destination addresses are on the same port segment will be filtered, constraining them to that one port and relieving the rest of the network from having to process them. A packet whose destination address is on another port segment will be forwarded to the appropriate port, and will not be sent to the other ports where it is not needed. Traffic needed for maintaining the operation of the network (such as occasional multi-cast packets) are forwarded to all ports.

The Magnum 6K25e Switches operate in the store-and-forward switching mode, which eliminates bad packets and enables peak performance to be achieved when there is heavy traffic on the network.

Address Learning

All Magnum 6K25e units have address table capacities of 4K node addresses suitable for use in larger networks. They are self-learning, so as nodes are added, removed or moved from one segment to another, the 6K25e Switch automatically keeps up with node locations.

An address-aging algorithm causes least-used addresses to fall out in favor of frequently-used addresses. To reset the address buffer, cycle power down-and-up.

4.2 Status LEDs

For all Magnum 6K25e models :

PWR : Power LED, ON when external power is applied to the unit.
LK : Steady ON, Link status for 10 Mbps and 100Mbps operation.
ACT : ON with port activity for 10 Mbps and 100Mbps operation.
F/H : Full / Half duplex LED, ON when the port is running full duplex, OFF for half duplex.
100/10 : Speed LED, ON when the speed is 100Mbps , OFF when the speed is 10 Mbps

4.3 Up-link MDI-MDIX on RJ-45 port modules, for port 1 only

The upper part of the copper port module has a manual Up-link switch, located

on the inside of the unit on the port module board next to the RJ45 port # 1 which it controls. It enables the port's cable to be cascaded (X) to a 10/100Mb repeater or switching hub in the network. The manual Up-link switch position is configured as (=) position as default factory setting, where used for all-copper module or combo modules.

4.4 Auto-Cross(MDIX) and Auto-negotiation, for RJ-45 ports

The RJ-45 ports independently support auto-cross (MDI or MDIX) in auto-negotiation mode and will work properly with all the other connected devices with RJ-45 port whether it supports Auto-negotiation or not (e.g 10Mb Hub, media converter) or fixed mode at 10Mb or 100Mb Half/Full Duplex(managed switch). No cross-over cable is required while using the 6K8's copper port to other devices. Operation is according to the IEEE 802.3u standard.

The Managed 6K25e-Series Fast Ethernet copper ports, can be set for either fixed 100Mb speed or for 10/100 F/H N-way auto-negotiation per the IEEE802.3u standard. The selection is made via MNS software. The factory default setting is for auto-negotiation. At 10Mb or 100Mb-fixed speed, the user may select half- or full-duplex mode by MNS Software for each RJ-45 port separately. For detail information **See Section (10.1 at page no.52) of this manual to access the "6K-MNS(Rel 3.7) Software user guide"**

One frequently-used application for the Managed Magnum 6K25e Switch copper ports is to connect one of them using a fiber media converter to another Switch in the network backbone, or to some other remote 100Mb device. In this case, it is desirable to operate the fiber link at 100Mb speed, and at either half- or full duplex mode depending on the capabilities of the remote device. Standard commercially available Fast Ethernet media converters mostly do not support auto-negotiation properly, and require that the switched port to which they are connected be at 100Mb fixed speed. Attachment to 10/100 auto-negotiation ports typically will not work properly. The 6K25e Switch's RJ-45 ports handle this situation by configuring the ports as per desire through MNS software port settings and can check the port status of each port after the change.

When Magnum 6K25e RJ-45 copper ports are set for auto-negotiation and are connected to another auto-negotiating device, there are 4 different speed and F/H modes possible depending on what the other device supports. These are: (1) 100Mb full-duplex, (2) 100Mb half-duplex, (3) 10 Mb full-duplex and (4) 10 Mb half-duplex.

The auto-negotiation logic will attempt to operate in descending order and will normally

arrive at the highest order mode that both devices can support at that time. (Since auto-negotiation is potentially an externally controlled process, the original "highest order mode" result can change at any time depending on network changes that may occur). If the device at the other end is not an auto-negotiating device, the 6K25e's RJ-45 ports will try to detect its idle signal to determine 10 or 100 speed, and will default to half-duplex at that speed per the IEEE standard.

General information -

Auto-negotiation per-port for 802.3u-compliant switches occurs when:

-- the devices at both ends of the cable are capable of operation at either 10 Mb or 100Mb speed and/or in full- or half-duplex mode, and can send/receive auto-negotiation pulses, and . . .

-- the second of the two connected devices is powered up*, i.e., when LINK is established for a port, or

-- the LINK is re-established on a port after being lost temporarily.

- **NOTE** – ***Some NIC cards only auto-negotiate when the computer system that they are in is powered up. These are exceptions to the "negotiate at LINK – enabled" rule above, but may be occasionally encountered.***

When operating in 100Mb half-duplex mode, cable distances and hop-counts may be limited within that collision domain. The Path Delay Value (PDV) bit-times must account for all devices and cable lengths within that domain. For Magnum 6K25e Fast Ethernet switched ports operating at 100Mb half-duplex, the bit time delay is 50BT.

4.5 Flow-control, IEEE 802.3x standard

Magnum 6K25e Switches incorporate a flow-control mechanism for Full-Duplex mode. The purpose of flow-control is to reduce the risk of data loss if a long burst of activity causes the switch to save frames until its buffer memory is full. This is most likely to occur when data is moving from a 100Mb port to a 10 Mb port and the 10Mb port is unable to keep up. It can also occur when multiple 100Mb ports are attempting to transmit to one 100Mb port, and in other protracted heavy traffic situations.

Magnum 6K25e Switches implement the 802.3x flow control (non-blocking) on Full-Duplex ports, which provides for a "PAUSE" packet to be transmitted to the sender when the packet buffer is nearly filled and there is danger of lost packets. The transmitting device is commanded to stop transmitting into the 6K25e Switch port for sufficient time to let the Switch reduce the buffer space used. When the available free-buffer queue increases, the Switch will send a "RESUME" packet to tell the transmitter to start sending the packets. Of course, the transmitting device must also support the 802.3x flow control standard in order to communicate properly during normal operation.

Note: When in Half-Duplex mode, the 6K25e Switch implements a back-pressure algorithm on 10/100 Mb ports for flow control. That is, the switch prevents frames from entering the device by forcing a collision indication on the half-duplex ports that are receiving. This temporary "collision" delay allows the available buffer space to improve as the switch catches up with the traffic flow.

4.6 Power Budget Calculations for Magnum 6K25e PM's with Fiber Media

Receiver Sensitivity and Transmitter Power are the parameters necessary to compute the power budget. To calculate the power budget of different fiber media installations using Magnum products, the following equations should be used:

OPB (Optical Power Budget) = P_T(min) - P_R(min)

where P_T = Transmitter Output Power, and P_R = Receiver Sensitivity

Worst case OPB = OPB - 1dB(for LED aging) - 1dB(for insertion loss)

Worst case distance = {Worst case OPB, in dB} / [Cable Loss, in dB/Km]

where the "Cable Loss" for 62.5/125 and 50/125μm (M.m) is 2.8 dB/km,
and the "Cable Loss" for 100/140 (Multi-mode) is 3.3 dB/km,
and the "Cable Loss" for 9/125 (Single-mode) is 0.5 dB/km
and the "Cable Loss" for 9/125 (Single-mode) is 0.4 dB/km (LXSC25)
and the "Cable Loss" for 9/125 (Single-mode) is 0.25 dB/km (LXSC40)
and the "Cable Loss" for 9/125 (Single-mode) is 0.2 dB/km (LXSC70)

The following data has been collected from component manufacturer's (Agilent's and Lucent') web sites and catalogs to provide guidance to network designers and installers.

Fiber Port Module	Speed, Std.	Mode	Std. km fdx (hdx)	Wave-length nm	Cable Size μm	X'mitr Output P_T, dB	R'cvr Sens. P_R,dB	Worst OPB, dB	Worst* distance Km, fdx	typical OPB, dB	typical* distance Km, fdx
6KP4-**F10ST**	**10Mb FL**	**Multi-Mode**	**2** (2)	850	62.5/125	-15.0	-31	14	**5**	17	**6**
					100/140	-9.5	-31	19.5	**5.9**	23.5	**7**
					50/125	-19.5	-31	19.5	**3.4**	13.5	**4.8**

6KPM-**MST, MSC**	**100Mb FX**	**Multi-mode**	**2** (0.4)	1300	62.5/125 50/125	-20 -23.5	-31 -31	9.0 5.5	**3.0** **2.0**		14 12	**5** **4**
6KPM-**SSC**	**100Mb FX**	**Single-mode**	**18+** (0.4)	1300	9/125	-15	-31	14	**28**		17.5	**35**
6KPM-**SSCL**	**100Mb FX**	**Single-mode**	**40** (0.4)	1300	9/125	-5	-34	29	**58**		32.5	**65**
6KPM-**MTRJ**	**100Mb FX**	**Multi-mode**	**2** (0.4)	1300	62.5/125 50/125	-20 -23.5	-31 -31	9.0 5.5	**3.0** **2.0**		15.8 12.2	**5.5** **4.0**
6KPM-**MLC**	**100Mb FX**	**Multi-mode**	**2** (0.4)	1300	62.5/125	-19	-31	12	**4**		16	**5.7**
6KPM-**SLC**	**100Mb FX**	**Single-Mode**	**15+ (0.4)**	1310	9/125	-15	-28	11	**22**		-	-
GBIC-**SXSC**	**1000Mb**	**Multi-mode**	**0.55**	1300	62.5/125 50/125	-9.5	-17	5.5	**2**		12.5	**4**
GBIC-**LXSC10**	**1000Mb**	**Single-mode**	**10**	1300	9/125	-9.5	-20	8.5	**17**		10.5	**21**
GBIC-**LXSC25**	**1000Mb**	**Single-mode**	**25**	1550	9/125	-4.0	-21	15	**37.5**		**17.5**	43
GBIC-**ZXSC40**	**1000Mb**	**Single-mode**	**40**	1550	9/125	-4.0	-21	15	**60**		**17.5**	70
GBIC-**ZXSC70**	**1000Mb**	**Single-mode**	**70**	1550	9/125	-3.0	-23	18	**90**		**20.5**	102

**** Note:*** *The use of either multi-mode or single-mode fiber to operate at 100Mbps speed over long distances (i.e., in excess of approx. 400 meters) can be achieved* **only** *if the following factors are both applied:*

- *The 100Mb fiber segment must operate in full-duplex (FDX) mode, i.e. the full-duplex (factory default) setting for 100Mbps fiber ports must be used, and*
- *The worst-case OPB of the fiber link must be greater than the fiber cable's passive Attenuation.*

(Attenuation = Cable loss + LED aging loss + Insertion loss + safety factor)

5.0 Introduction - Magnum 6K25e Managed Fiber Switch Port Modules

This chapter describes each Port Module (PM), including appearance, functionality, and status displays.

5.1 Inspecting the Package and Product

This section applies only to PMs shipped as separate items, i.e., 6K25e PMs not factory installed in a Magnum 6K25e PM slot.

Examine the shipping container for obvious damage prior to installing a 6K25e PM; notify the carrier of any damage you believe occurred during shipment or delivery. Inspect the contents of this package for any signs of damage and ensure that the items listed below are included.

This package should contain:

1 or more 6K25e PMs

Installation instructions, with illustrations

Remove the 6K25e PM(s) from the shipping container. Be sure to keep the shipping container should you need to ship any of the PMs separately at a later date. In the event there are items missing or damaged, contact your supplier. If you need to return the unit, use the original shipping container if possible. Refer to Chapter 5 for specific return procedures.

5.2 6KPM Module Description

An important feature of the Magnum 6K25e is the use of Port Modules for flexible mixed-media connectivity to RJ-45 and fiber media. Since the Magnum 6K25e Switches have dual-speed capability for copper ports, the 6 or 8-port interfaces are designed to support all standard Ethernet media types at 10 or 100Mps speed. Each 6K25e PM provides six or eight ports for connecting Ethernet segments with its individual connector type and media.

For a list of 6K25e Port Module types, refer to Section 1.2

Each 6K25e PM is individually described in the following sections.

NOTE: The port #1 on the RJ-45 ports on all the modules, either all RJ-45 ports or used for COMBO module is set as (=) other user ports.

5.2.1 6KP6-RJMST, 4@10/100Mbps RJ-45 and 2@100Mb multi-mode FX-ST "twist lock" Combo Module

The Magnum 6KP6-RJMST is a combo 6 port module of RJ-45's at 10/100Mbps and fiber optic ports at 100MB. The Combo module is equipped with dual-mode ST-type connectors and dual speed copper ports. The ST-connector functions as a fiber optic transceiver to support 100BASE-FX network segments. When installed in a Magnum 6K25e Managed Switch, the copper port supports the standard distance 100m on each port and the fiber port supports fiber optic cable distances up the IEEE-standard 100Mbps distance limits, i.e., typically 2km at full-duplex and 412m at half-duplex.

6KP6-RJMST,

4 Port@ 10/100Mbps and 2 @100 Mb ST Fiber Port

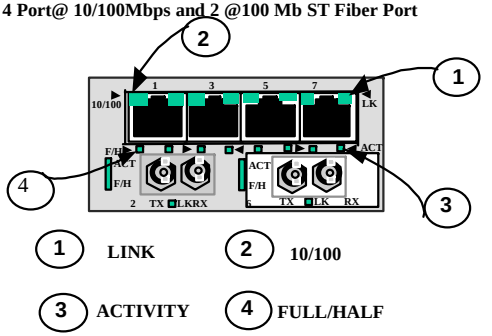

Each port has an Activity (ACT) LED indicating packets being received, a Link (LK) LED that indicates proper connectivity with the remote device when lit, and FDX/HDX LED to indicate full-duplex mode when lit (or half-duplex when off). The 10/100 LED indicates the speed, if the LED is ON 100Mbps if it is OFF 10Mbps.

5.2.1a 6KP6-RJ10ST, 4@10/100Mbps RJ-45 and 2@10Mb multi-mode FX-ST "twist lock" Combo Module

The 6KP6-RJ10ST is a six port combo module that looks similar to the 100Mb combo module with the exception of 10Mb speed at the ST fiber module. The ST-connector functions as a fiber optic transceiver to support 10BASE-FX network segments. When installed in a Magnum 6K25e Managed Switch, the copper port supports the standard distance 100m on each port and the fiber port supports fiber optic cable distances up the IEEE-standard 10Mbps distance limits, i.e., typically 2km at full-duplex and half-duplex.

Each port has an Activity (ACT) LED indicating packets being received, a Link (LK) LED that indicates proper connectivity with the remote device when lit, and FDX/HDX LED to indicate full-duplex mode when lit (or half-duplex when off). The 10/100 LED indicates the speed, if the LED is ON, 100Mbps if it is OFF, 10Mbps.

5.2.1b 6KP4-F10ST, 4@10Mb multi-mode FX-ST "twist lock" Module

The Magnum 6KP4-F10ST is a 10Mb multi-mode fiber module with 4 ST-Fiber ports. All four fiber ports are ST connectors and configured as 10Mb Half-duplex by default. The 10Mb ST-fiber ports allow the user to connect their legacy 10Mb network to the Magnum 6K25e switch. They also provide a convenient way for the half duplex hub to connect to the switch through 10Mb fiber ports. It supports distances according to the 10Base-FL standard i.e, 2Km distance for multi-mode fiber. (Single-mode for 10Km distance may be available as a special order).

6KP4-RJ10MST,

4 Port@ 10Mb ST Fiber Port

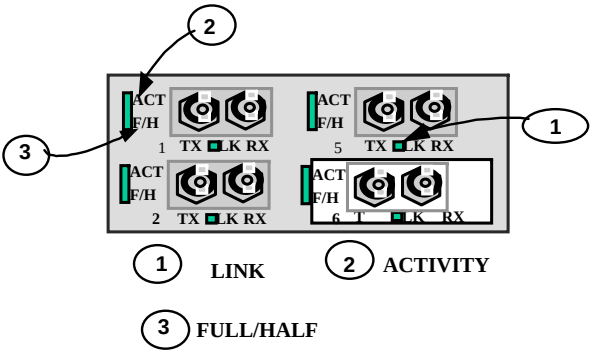

Each port has an Activity (ACT) LED indicating packets being received, a Link (LK) LED indicating proper connectivity with the remote device when lit, and FDX/HDX LED indicating full-duplex mode when lit (or half-duplex if off).

5.2.1c 6KP4-FLSTFX, 2@10Mb & 2@100Mb multi-mode FX-ST "twist lock" Module

The Magnum 6KP4-FLSTFX is a combo fiber module with two 10Mb + two 100Mb multi-mode fiber module and in combine 4 ST-Fiber ports.

6KP4-RJ10MST,

4 Port@ 10Mb ST Fiber Port

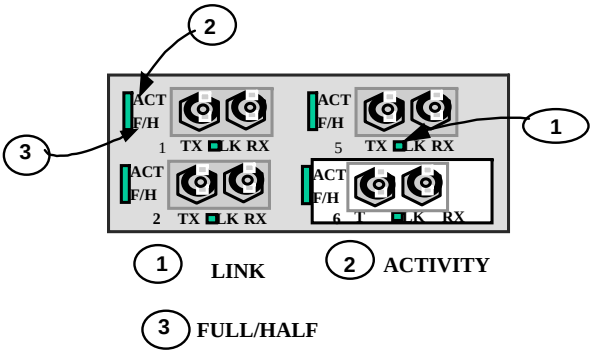

All four fiber ports are ST connectors and configured as 10Mb Half-duplex by default for 10Mb fiber and 100Mb Full duplex for the 100Mb fiber. The 10Mb ST-fiber ports allow the user to connect their legacy 10Mb network to the Magnum 6K25e switch. They also provide a convenient way for the half duplex hub to connect to the switch through 10Mb

fiber ports. Whereas the 100Mb ST module allow to connect the 100Mb demand of Switch devices. It supports distances according to the 10Base-FL standard i.e, 2Km distance for multi-mode fiber. (Single-mode for 10Km distance may be available as a special order).

Each port has an Activity (ACT) LED indicating packets being received, a Link (LK) LED indicating proper connectivity with the remote device when lit, and FDX/HDX LED indicating full-duplex mode when lit (or half-duplex if off).

5.2.2. 6KP6-RJMSC 4@10/100Mbps RJ-45 and 2@100Mb multi-mode FX-SC "snap-in" Fiber connector

The Magnum 6KP6-RJMSC is also a Combo 6 Port module equipped with 4 10/100Mb RJ-45 ports along with 2 multi-mode 100Mbps fiber optic transceivers all in one module. This is similar to the 6K6-RJMST. It has the same LEDs indicating port activity (ACT), Link (LK), and FDX / HDX and 10/100 operation, and the same face-plate lettering.

6KP6-RJMSC,

4 Port@ 10/100Mbps and 2 @100 Mb SC Fiber Port

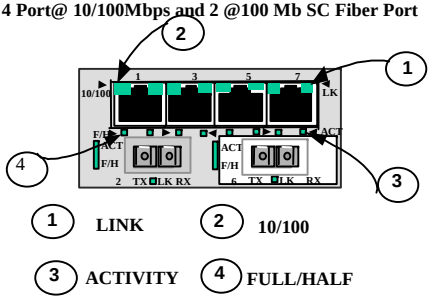

While the functionality of these two modules is essentially the same, the 6KP6-RJMSC is equipped with an SC-type "snap-in" connector instead of an ST-type.

5.2.3 6KP6-RJSSC 4@ 10/100Mbps RJ-45 Ports and 2@100Mbps single-mode FX-SC-type, "snap-in" connector

The Magnum 6KP6-RJSSC is also a Combo module equipped with 4 dual speed copper ports and 2 Single-mode SC-type connectors. It provides an advantage through combining copper and Fiber functions in one module of the 6K25e Switch supporting four Copper and two single-mode fiber network segments.

6KP6-RJMSSC,

4 Port@ 10/100Mbps and 2 @100 Mb SSC Fiber Port

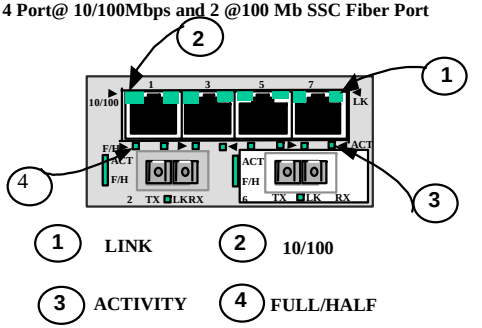

The 6KP6-RJSSC, when installed in a Magnum 6K25e Switch operates on copper at the 100m distance. The Fiber is single-mode and cable lengths can be as much as 25+ Km (see Power Budget, Section 4.5)

Each port has an Activity (ACT) LED indicating packets being received, a Link (LK) LED that indicates proper connectivity with the remote device when lit, and a FDX/HDX LED to indicate full-duplex mode when lit (or half-duplex when off). The 10/100 LED indicates 100Mbps speed when lit and 10Mbps speed when off. To distinguish the single-mode 6 K6-RJSSC from the multi-mode 6K6-RJMSC, the label "Sgl. M." is at the top of the faceplate of the 6K6-RJSSC.

5.2.4 6KP6-RJSSCL 4 @ 10/100 Mb copper port and 2@100Mbps single-mode FX-SC-type, "snap-in" connector

The Magnum 6KP6-RJSSC is also a Combo module equipped with 4 dual speed copper ports and 2 Single-mode (Long Reach) SC-type connectors. It provides a combination of copper and Fiber functions in one module to the 6K25e Switches, supporting four Copper and two single-mode (Long-Reach) fiber network segments.

The 6KP6-RJSSC, when installed in a Magnum 6K25e Switch has copper supporting the 100m distance and Fiber supporting single-mode fiber cable lengths of as much as 40+ Km (see Power Budget, Section 4.5)

Each port has an Activity (ACT) LED indicating packets being received, a Link (LK) LED indicating proper connectivity with the remote device when lit, and a FDX/HDX LED indicating full-duplex mode when lit (or half-duplex when off). The 10/100 LED indicates the speed for the copper port, which is 100Mbps when the LED is ON and 10 Mb when the LED is OFF.

5.2.4a 6KP6-RJ10ST 4 @ 10/100 Mb copper port and 2@10Mbps multi-mode FL-ST-type, "twist-lock" connector

The Magnum 6KP6-RJ10ST is also a Combo module equipped with 4 dual speed copper ports and 2 multi-mode 10 Mb fiber ST-type connectors. It provides a combination of copper and Fiber functions in one module to the 6K25e Switches, supporting four Copper and two 10Mb of ST fiber network segments.

The 6KP6-RJ10ST, when installed in a Magnum 6K25e Switch has copper supporting the 100m distance and Fiber supporting multi-mode fiber cable allow to connect the legacy network of 10Mb requirement in the network. Each port has an Activity (ACT) LED indicating packets being received, a Link (LK) LED indicating

proper connectivity with the remote device when lit, and a FDX/HDX LED indicating full-duplex mode when lit (or half-duplex when off). The 10/100 LED indicates the speed for the copper port, which is 10Mbps when the LED is ON and 10 Mb when the LED is OFF.

5.2.5 6KP8-MTRJ, 8 @100Mb multi-mode FX , MTRJ Small-Form-factor

Magnum 6KP8-MTRJ is a multi-mode fiber optic 8-port module equipped with a small-form-factor MTRJ-type connector. It looks almost like an RJ-45 port, but it is black in color. The MT-RJ's small size and ease of connection make it a good choice for 100Mbps "fiber-to-the-desktop" Ethernet connectivity. When installed in a Magnum 6K25e Switch, it supports fiber optic cable distances up the IEEE-standard 100Mbps distance limits, i.e., typically 2km at full-duplex and 412m at half-duplex.

6KP8-MTRJ "small-form-factor"
8 Port@ 100Mbps Multi-Mode Fiber port

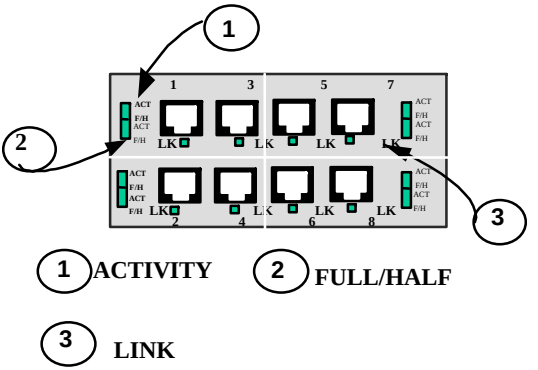

The functionality of this 100BASE-FX multi-mode 8 Port module is essentially the same as the ST and SC-types. It has the same LEDs per port indicating port activity (ACT), Link (LK), and FDX or HDX operation.

5.2.5a 6KP6-MT10ST, 4 @100Mb multi-mode FX , MTRJ Small-Form-Factor and 2@ 10Mb Multi-mode ST-Fiber port

The 6KP6-RJ10ST is a combo module with two different kinds of fiber flavor with two different speeds. The top four ports of MTRJ Small form factor fiber support at 100Mb full-duplex, whereas the bottom two ports multi-mode ST-Fiber support 10Mb half-duplex. This combo module provides more flexibility to the user to connect their legacy 10Mb fiber as well as 100Mb to the Magnum 6K25e Switch.

When installed in a Magnum 6K25e Switch, the 100Mb MTRJ connector supports fiber optic cable distances up to the IEEE-standard 100Mbps distance limits, i.e., typically 2km at full-duplex and 412m at half-duplex. The 10Mb Multi-mode ST-

Fiber connector supports the standard fiber optic distance limit of 2Km at Full and Half-duplex both.

The functionality of this 100BASE-FX multi-mode 4 port module is essentially the same as the ST and SC-types. It has the same LEDs per port indicating port activity (ACT), Link (LK), and FDX or HDX operation

5.2.6 6KP8-45MT, 4@ 10/100Mbps RJ-45 and 4@100Mb multi-mode FX , MTRJ Small-Form-Factor

The Magnum 6KP8-45MT Module is a combo module with copper and fiber (Small Form Factor) MTRJ type ports. The small size of MTRJ connectors give an advantage of placing more ports on one module. The 6KP8-45MT is equipped with 4 10/100 RJ-45 ports and 4 MTRJ fiber ports.

6KP8-45MT

4 Port@ 10/100Mbps & 4 port @ 100Mbps Multi-Mode Fiber port

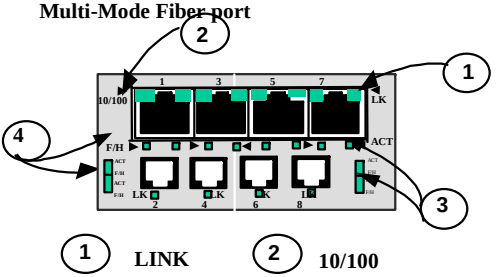

1 LINK 2 10/100

3 ACTIVITY 4 FULL/HALF

When installed in a Magnum 6K25e Switch, it supports the standard distances as mentioned on 5.2.3. and the LEDs also act similarly.

8-Port@ 100Mbps multi-mode LC fiber port

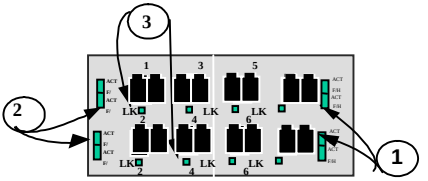

1 ACTIVITY 2 FULL/HALF

3 LINK

5.2.7 6KP8-MLC, 8 ports @ 100Mbps multi-mode LC connector Small-Form Factor

Magnum 6KP8-MLC is a eight-port multi-mode fiber LC connector “small-form-factor” used primarily in 100Mbps fiber-to-the-desktop links.

When installed in a Magnum 6K25e Switch, it supports fiber optic cable distances up to the IEEE-standard 100Mbps distance limits, i.e., typically 2km at full-duplex and 412m at half-duplex.The compact size of the LC Connector reduces the size of wiring panels in wiring closets while providing the advantage of “future-proof” fiber optic technology.The cable end is a “plug-in” connector with both fiber strands terminated in

one housing that cannot be improperly inserted. Each port has an Activity (ACT) LED indicating packets being received, a Link (LK) LED indicating proper connectivity with the remote device when lit, and a FDX/HDX LED indicating full-duplex mode when lit (or half-duplex when off).

5.2.8 6KP8-45LC, Combo 4@ 100Mbps multi-mode -LC small-form factor and 4@ 10/100 Mbps RJ-45 Connector

The Magnum 6KP8-45LC Module is a combo module with a combination of copper and Fiber (Small Form Factor) LC type ports. The small size of LC connectors give an advantage of having more ports on one module. The 6KP8-45LC is equipped with 4 10/100 RJ-45 ports and 4 LC(Small form factor) multi-mode fiber ports.

4 Port@ 10/100Mbps & 4 port @ 100Mbps Multi-Mod LC Fiber port

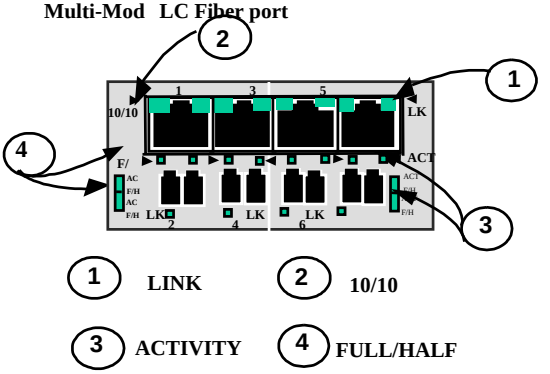

1 LINK 2 10/10

3 ACTIVITY 4 FULL/HALF

When installed in a Magnum 6K25e Switch, it supports the standard distances as per mentioned on 5.2.8. and the LEDs also acts similarly as mentioned above.

5.2.9 6KP8-RJ45 (Twisted Pair), 10/100Mb 8-Port

The 6KP8-RJ45 module supports Ethernet twisted pair segments of any standard length. It is equipped with an eight-port RJ-45 connector, and offers 10/100 full / half-duplex auto-negotiating capability on each port. The RJ-45 connector is shielded to minimize emissions and will allow both unshielded twisted pair (UTP) and shielded twisted pair (STP) cable connections. The 6KP8-RJ45 module is equipped with a Media Dependent Auto-

6KP8-RJ45,

8 Port@ 10/100Mb Copper ports

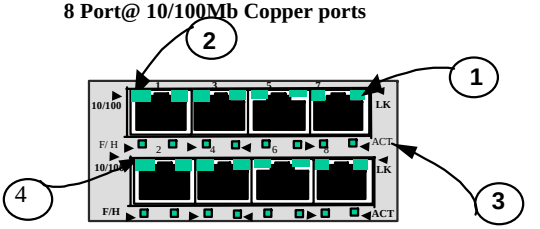

1 LINK 2 10/100

3 ACTIVITY 4 FULL/HALF

Crossover (MDI-X) switch, which controls all ports for cascaded connection. This feature eliminates the need for a special twisted pair crossover cable when connecting to a hub or another switch.

Each port has an Activity (ACT) LED indicating packets being received, a Link (LK) LED that indicates proper connectivity with the remote device when lit, a FDX/HDX LED to indicate full-duplex mode when lit (or half-duplex when off), and a "10/100" LED indicating 100Mb when lit (or 10 Mbps when off).

Important Note: The 10/100 RJ-45 ports are supported with Auto-negotiation and Auto-crossover (MDIX), which allow the RJ-45 ports to automatically Link with any RJ-45 device and eliminate the use of cross-over cable.

NOTE: for Power Substations: *In support of the IEEE 1613 Class 2 standard, GCI advises that, for substation applications, the RJ-45 ports are intended for connectivity to other communication equipment such as routers or telecommunication multiplexers installed in close proximity (i.e., less than 2 meters or 6.5ft) to the 6K25e. It is not recommended to use these ports in substation applications to interface to field devices across distances which could produce kigh (greater than 2500V) levels of ground potential rise (GPR) during line-to-ground fault conditions. The 6K25e passes the 1613specifications for zero packet loss with fiber ports & with RJ45 ports used as indicated here.*

5.2.10 *New* PoE(Power Inside), model PI6KP8-45RJ (MDIX), 10/100Mb 8-port

The PoE RJ-45 ports act similar to regular RJ-45 ports, except they have capability of providing power on each port to power up the PD devices, per the IEEE802.3af PoE standard. Only 4 x RJ-45 (10/100) ports maxm. support POE(Power Inside) option in one 6K-unit. In this Fig. the top 4-RJ45 ports are enhanced with POE option whereas as bottom 4- RJ-45 are normal MDIX ports. The 4-RJ45 POE module are also available with mix –n-match with fiber modules. Please check the ordering information Sec.1.2. for all the various PI6K PoE modules option.

6KP8-45RJ

8 Port@ 10/100Mb Copper ports

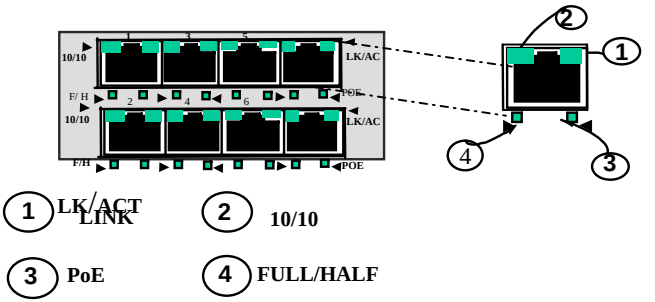

The LEDs on 6KP8-RJ45- PoE module are slightly different compared to regular (non-PoE) RJ-45 modules as shown in Fig 2. When the PoE port is in use, the PoE LED is ON when connected properly to a 803.af compliant PD device on that port. When non-PoE devices are connected, the PoE LED is OFF. Operation of Ethernet data traffic is not affected by PoE.

LINK and ACTIVITY LEDS are combined on the PoE modules into one LED that is marked as LINK/ACT, as shown in the diagram.

PoE LEDs Summary

- For PoE devices, each RJ-45 PoE port supports only 802.3af complaint devices. The PoE LED is ON when the attached PD is drawing power from the port.
- For non-PoE devices connected, the PoE port will act as a normal RJ-45 port and the PoE LED is OFF. No power is being sent out from the port.
- The PoE ports in Magnum 6K's with 48VDC power input act as a pass-through, so the 48VDC power source must be strong enough to provide power to the 6K switch and to all the 8 RJ-45 ports with PD devices connected (up to 15 watts per PoE port).
- In the case where the 48VDC power in not internally connected and no power is coming to the PoE ports for some reason, all the PoE port LEDs are ON simultaneously to indicate a trouble condition. The ports will still operate properly for data traffic.

5.2.11 *New* PoE(Power Pass-through), model P6KP8-RJ45 (MDIX), 10/100Mb 8-port

The PoE RJ-45 ports act similar to regular RJ-45 ports, except they have capability of providing power on each port to power up the PD devices, per the IEEE802.3af PoE standard. The Power Pass-through PoE modules are totally dependent upon the powerful -48VDC input power supply to support more RJ-45 (10/100) ports. Each port require atleast 15watts to power up the PoE PD devices. In this Fig. the top 8-RJ45 ports are enhanced with POE option The 8-RJ45 POE module are also available with mix –n-match with fiber modules. Please check the ordering information Sec.1.2 for all the various P6K PoE modules option.

6KP8-45RJ

8 Port@ 10/100Mb Copper ports

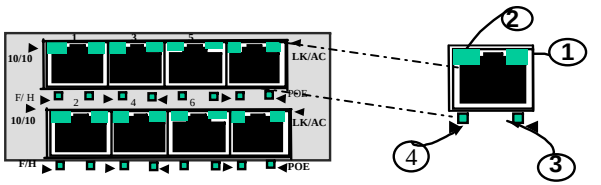

1 **LK/ACT LINK** 2 **10/10**

3 **PoE** 4 **FULL/HALF**

The LEDs on 6KP8-RJ45- PoE module are slightly different compared to regular (non-PoE) RJ-45 modules as shown in Fig 2. When the PoE port is in use, the PoE LED is ON when connected properly to a 803.af compliant PD device on that port.

When non-PoE devices are connected, the PoE LED is OFF. Operation of Ethernet data traffic is not affected by PoE.

LINK and ACTIVITY LEDS are combined on the PoE modules into one LED that is marked as LINK/ACT, as shown in the diagram.

PoE LEDs Summary

- For PoE devices, each RJ-45 PoE port supports only 802.3af complaint devices. The PoE LED is ON when the attached PD is drawing power from the port.
- For non-PoE devices connected, the PoE port will act as a normal RJ-45 port and the PoE LED is OFF. No power is being sent out from the port.
- The PoE ports in Magnum 6K's with 48VDC power input act as a pass-through, so the 48VDC power source must be strong enough to provide power to the 6K switch and to all the 8 RJ-45 ports with PD devices connected (up to 15 watts per PoE port).
- In the case where the 48VDC power in not internally connected and no power is coming to the PoE ports for some reason, all the PoE port LEDs are ON simultaneously to indicate a trouble condition. The ports will still operate properly for data traffic.

5.2.12 6KP8-45-2MT, 6@ 10/100Mbps RJ-45 and 2@100Mb multi-mode FX , MTRJ Small-Form-Factor

The Magnum 6KP8-45-2MT eight port Module is a combo module with copper and fiber (Small Form Factor) MTRJ type ports. The small sizes of MTRJ connectors give an advantage of placing more fiber ports on one module. The 6KP8-45-2MT is equipped with six 10/100 RJ-45 ports and two 100Mb MTRJ fiber ports. When installed in a Magnum 6K25e Switch, it supports the standard distances as mentioned on 5.2.3. and the LEDs also act similarly.

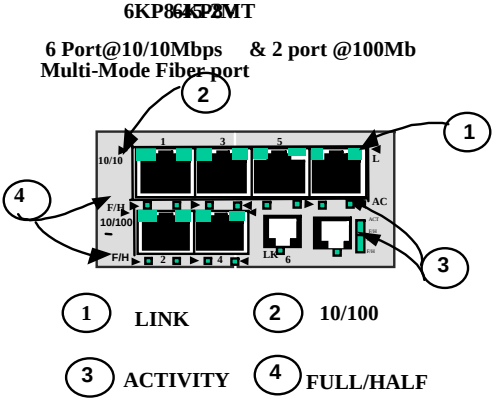

5.2.12a 6KP8-45-2LC, 6@ 10/100Mbps RJ-45 and 2@100Mb single-mode FX , LC Small-Form-Factor

The Magnum 6KP8-45SLC eight port Module is a combo module with copper and fiber (Small Form Factor) LC type fiber ports.

The small size of LC connectors give an advantage of placing more ports on one module. The 6KP8-45-2SLC is equipped with 6 10/100 RJ-45 ports and 2 Single-mode fiber ports.

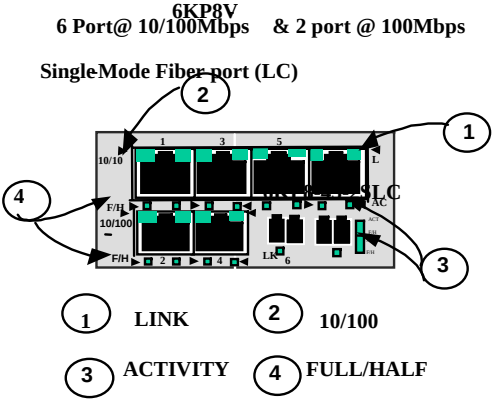

When installed in a Magnum 6K25e Switch, it supports the standard distances as mentioned on 5.2.4. and the LEDs also act similarly.

5.2.13 GBIC-SXSC Gigabit fiber(1000Mb), multi-mode SC Connector

The Magnum GBIC-SXSC is a multi-mode Gigabit fiber connector equipped with SC type connectors and can be easily snapped in and out. The Gigabit fiber ports are most popular as server-to-switch and switch-to-switch applications. It supports cable distances up to the IEEE 802.3z standard 1000Mbps distance limits, i.e., 550m at full duplex.

The GBIC transceiver is fastened using snap-in clips. Insert the transceiver (take care to insert it the right way up, arrows on top) until it clicks in space. While removing the transceiver, press the clips on either side of the transceiver at the same time and pull the transceiver out.

Each port has an Activity (ACT) LED indicating packets being received and a Link (LK) LED indicating proper connectivity with the remote device when lit.

5.2.13a GBIC-LXSC & ZXSC Gigabit fiber (1000Mb), single-mode SC Connector

The Magnum GBIC-LXSC/ZXSC is a single-mode Gigabit fiber connector equipped with SC type connectors and can be easily snapped in and out. The Gigabit fiber ports are most popular as server-to-switch and switch-to-switch applications. It supports cable distances up to the IEEE 802.3z standard 1000Mbps distance limits, i.e., 10,25, 40 or 70Km at full duplex, and depend upon the Gigabit modules used.

Each port has an Activity (ACT) LED indicating packets being received and a link (LK) LED indicating proper connectivity with the remote device when lit.

5.2.14 6KM-BLNK

The 6KM-BLNK is a blank face plate or cover plate that must be installed in any empty 6K25e PM slot to maintain proper cooling air flow, safety, etc.

Two screws underneath the front panel hold the 6KM-BLNK in place.

6.0 TROUBLESHOOTING

All Magnum Ethernet products are designed to provide reliability and consistently high performance in all network environments. The installation of a Magnum 6K25e Switch is a straightforward procedure (see INSTALLATION, Section 2.6); the operation is also straightforward and is discussed in Section 4.

Should problems develop during installation or operation, this section is intended to help locate, identify and correct these types of problems. Please follow the suggestions listed below prior to contacting your supplier. However, if you are unsure of the procedures described in this section or if the Magnum 6K25e Switch is not performing as expected, do not attempt to repair the unit; instead contact your supplier for assistance or contact GarrettCom Customer Support.

6.1 Before Calling for Assistance

1. If difficulty is encountered when installing or operating the unit, refer back to the Installation Section of the applicable chapter of this manual. Also check to make sure that the various components of the network are interoperable.
2. Check the cables and connectors to ensure that they have been properly connected and the cables/wires have not been crimped or in some way impaired during installation. (About 90% of network downtime can be attributed to wiring and connector problems.)
3. Make sure that an AC power cord is properly attached to each Magnum 6K25e Switch unit. Be certain that each AC power cord is plugged into a functioning electrical outlet. Use the PWR LEDs to verify each unit is receiving power.

4. If the problem is isolated to a network device other than the Magnum 6K25e Switch product, it is recommended that the problem device be replaced with a known good device. Verify whether or not the problem is corrected. If not, go to Step 5 below. If the problem is corrected, the Magnum 6K25e Switch and its associated cables are functioning properly.

5. If the problem continues after completing Step 4 above, contact your supplier of the Magnum 6K25e Switch unit or if unknown, contact GarrettCom, Inc.by fax, phone or email (*support@garrettcom.com*) for assistance.

6.2 When Calling for Assistance

Please be prepared to provide the following information.

1. A complete description of the problem, including the following points:
   a. The nature and duration of the problem;
   b. Situations when the problem occurs;
   c. The components involved in the problem;
   d. Any particular application that, when used, appears to create the problem;
2. An accurate list of GarrettCom product model(s) involved, with serial number(s). Include the date(s) that you purchased the products from your supplier.
3. It is useful to include other network equipment models and related hardware, including personal computers, workstations, terminals and printers; plus, the various network media types being used.
4. A record of changes that have been made to your network configuration prior to the occurrence of the problem. Any changes to system administration procedures should all be noted in this record.

6.3 Return Material Authorization (RMA) Procedure

All returns for repair must be accompanied by a Return Material Authorization (RMA) number. To obtain an RMA number, please use this URL - **https://rma.garrettcom.com/rma/rma_request_noaccount.php** to fill out the form. Please have the following information readily available:

Name and phone number of your contact person.
Name of your company / institution
Your shipping address
Product name
Serial Number (or Invoice Number)
Packing List Number (or Sales Order Number)
Date of installation
Failure symptoms, including a full description of the problem.

GarrettCom will carefully test and evaluate all returned products, will repair products that are under warranty at no charge, and will return the warranty-repaired units to the sender with shipping charges prepaid (see Warranty Information, Appendix A, for complete details). However, if the problem or condition causing the return cannot be duplicated by GarrettCom, the unit will be returned as:

No Problem Found.

GarrettCom reserves the right to charge for the testing of non-defective units under warranty. Testing and repair of product that is not under warranty will result in a customer (user) charge.

6.4 Shipping and Packaging Information

Should you need to ship the unit back to GarrettCom, please follow these instructions:

1. Package the unit carefully. It is recommended that you use the original container if available. Units should be wrapped in a "bubble-wrap" plastic sheet or bag for shipping protection. (You may retain all connectors and this Installation Guide.)

CAUTION: Do not pack the unit in Styrofoam "popcorn" type packing material. This material may cause electro-static shock damage to the unit.

2. Clearly mark the Return Material Authorization (RMA) number on the outside of the shipping container.
3. GarrettCom is not responsible for your return shipping charges.
4. Ship the package to:

GarrettCom, Inc.

47823 Westinghouse Dr.

Fremont, CA 94539-7437

Attn.: Customer Service

APPENDIX A: WARRANTY INFORMATION

GarrettCom, Inc. warrants its products to be free from defects in materials and workmanship for a period of three (3) years from the date of shipment by GarrettCom.

During this warranty period, GarrettCom will repair or, at its option, replace components in the products that prove to be defective at no charge other than shipping and handling, provided that the product is returned pre-paid to GarrettCom.

This warranty will not be effective if, in the opinion of GarrettCom, the product has been damaged by misuse, misapplication, or as a result of service or modification other than by GarrettCom.

GarrettCom reserves the right to make a charge for handling and inspecting any product returned for warranty repair which turns out not to be faulty.

Please complete the warranty card as this acts as a product registration, and mail it to GarrettCom within two weeks of your purchase.

APPENDIX B : Internal DC Power Supply Options

B1.0 SPECIFICATIONS FOR MAGNUM 6K25E SWITCHES, DC POWER

Power Supply (Internal -48VDC Option)

DC Power Connector: 3 terminals: "-", "GND", "+"
Input Voltage: 36 - 70 VDC
Power Consumption: Same as for AC models (see Section 1.1)

Power Supply (Internal 24 VDC Option) Industrial Applications

DC Power Connector: 3 terminals: "-", "GND", "+"
Input Voltage: 20 - 36 VDC
Power Consumption: Same as for AC models (see Section 1.1)

Power Supply (Internal 125 VDC Option) Industrial Applications

DC Power Connector: 3 terminals: "-", "GND", "+"
Input Voltage: 88 - 150 VDC
Power Consumption: Same as for AC models (see Section 1.1)

With the exception of the power supply, all specifications and functions of Magnum 6K25e Switch -48VDC, 24VDC and 125VDC models are identical to those listed in the main manual.

B2.0 -48VDC, 24VDC and 125VDC POWER, THEORY OF OPERATION

The -48VDC, 24VDC and 125VDC power options are designed using diodes inside on each DC power input line behind the two external power connection terminals, so that the power from an external source can only flow into the hub. This allows the Switch to operate only whenever DC power is correctly applied to the two inputs.

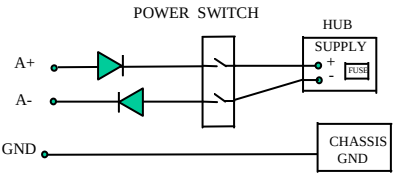

It protects the Switch from incorrect DC input connections. An incorrect polarity connection, for example, will neither affect the Switch, its internal power supply, nor will it blow the fuse in the internal power supply.

The manual power "On-Off" Switch (optional) is used for powering the unit on and off when it is placed into or taken out of service.

B3.0 APPLICATIONS FOR DC POWERED SWITCHES

Magnum 6K25e Fiber Switches are easily installed in a variety of applications where -48VDC, 24VDC and 125VDC power is used as the primary power source. The-48VDC, 24VDC and 125VDC power configuration provides an Ethernet networking solution utilizing a special power supply in a managed Fiber Switch.

The –48VDC solution is particularly useful in the telecommunication industry, where it is common for facilities to operate on -48VDC power. Such companies include regular and wireless telephone service providers, Internet Service Providers (ISPs) and

other communication companies. In addition, many high availability equipment services, such as broadcasters, publishers, newspaper operations, brokerage firms and other facilities often use a battery backup system to maintain operations in the event of a power failure. It is also frequently used for computer system backup, management and operations monitoring equipment.

The 24VDC and 125VDC solution are particularly useful in the Industrial environment, where it is common facilities to operate on 24VDC or 125VDC power. The 125VDC solution is mainly used in power utilities, such as electrical substations, electrical generating plants, etc. The 24VDC applications are mainly in the Industrial environment, such as factory floor, HVAC equipment, military equipment, etc.

B4.0 INSTALLATION

This section describes the installation of the -48 VDC, 24VDC and 125VDC power source leads to the -48 VDC, 24VDC and 125VDC power terminal block on the Magnum 6K25es. (see figure at right).

In this picture, the -48VDC terminal block on the Magnum 6K25e is located on the rear of the unit and is equipped with three (3) screw-down lead posts. It is similar for 24VDC and 125VDC options on Magnum 6K25e. The leads are identified as negative (-), positive (+), and chassis ground (GND).

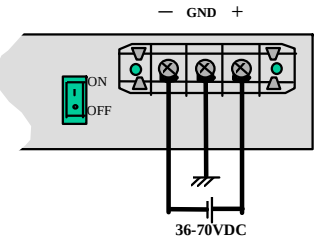

Figure B4.0: -48VDC Terminal Block on Magnum 6K25e-48VDC

The actual connection procedure is very straightforward. Simply connect the leads to the Magnum unit, beginning with ground. Ensure that each lead is securely tightened.

Note: The GND should be hooked up first. The 6K25e unit has a floating ground, so the user may elect to Ground either + or = terminal to suit the customer's use.

Before connecting hot lines to the Terminal Block of –48VDC, 24VDC or 125VDC, always use a digital voltmeter to measure the output voltage of the power supply and determine the lead which is more "+ve potential". The more "+ve" voltage lead from 48V or –48V supply must be connected to the post labeled "+".

An ON-OFF manual switch is optional for DC power. This can be used to cut off power connections and as a RESET for the Magnum 6K25e Switch.

B4.1 UL Requirements for DC-powered units

1. *Minimum 18AWG cable for connection to a Centralized DC power source.*
2. *Minimum 14AWG cable for connection to a earthing wiring.*
3. *Use only with Listed 10 A circuit breaker provided in building installation.*
4. *"Complies with FDA radiation performance standards, 21 CFR subchapter J." or equivalent.*
5. *Fastening torque of the lugs on the terminal block: 9 inch-pound max.*
6. *Centralized DC Power Source cable securement, use at least four cable ties to secure the cable to the rac,k at least 4 inches apart, with the first one located within 6 inches of the terminal block.*

B5.0 OPERATION

Operation of Magnum 6K25e Switches with the optional -48VDC, 24VDC and 125VDC power supply is identical to that of the standard AC-powered models.

B6.0 ORDERING INFORMATION

To order the optional -48VDC power supply factory installed, add a suffix of "--48VDC" after the product's standard model # Example: **Magnum 6K25eR-48VDC.**

Similarly to order the optional 24VDC or 125VDC industrial specific power supply factory installed, add a suffix of " 24VDC" or "125VDC" after the product 's standard model #. Example: Magnum 6K25e- 24VDC, Magnum 6K25e-125VDC.

B7.0 TROUBLESHOOTING

Please refer to Section 6.0 for troubleshooting

APPENDIX C: Internal DC Dual-Source Power Option

C1.0 SPECIFICATIONS - FOR MAGNUM 6K25E FIBER SWITCH

Power Supply (Internal, -48VDC Dual-Source, model # Dual-Src-48V)
DC Power Connector: First Source: "A+", "A-", 2nd Source "B-", "B+"
GND: Terminal for "earth" or ground wire connection to the hub chassis
Input: Two separate sources, each at 36 - 70 VDC

Power Supply (Internal, 24VDC Dual-Source, model # Dual-Src-24V)
DC Power Connector: First Source: "A+", "A-", 2nd Source "B-", "B+"
GND: Terminal for "earth" or ground wire connection to the hub chassis
Input: Two separate sources, each at 20 - 36 VDC

Power Supply (Internal, 125VDC Dual-Source, model # Dual-Src-24V)
DC Power Connector: First Source: "A+", "A-", 2nd Source "B-", "B+"
GND: Terminal for "earth" or ground wire connection to the hub chassis
Input: Two separate sources, each at 88 - 150 VDC

With the exception of the dual DC input power connections and the power supply, all specifications and configuration options for the Magnum 6K25e -48VDC, 24VDC and 125VDC models with this Dual-Source option are identical to those listed in the ***Magnum 6K25e Fiber Switches Installation and User Guide***, including Appendix B "Internal DC Power Supply Option"

C2.0 MAGNUM 6K25E, with -48VDC, 24VDC and 125VDC Dual-Source option

The 6K25e-Switch models with the internal -48VDC, 24VDC and 125VDC Dual-Source power supply are designed for installations where a battery plant is the power source, and where two separate power sources are utilized in order to increase operational uptime and to simplify maintenance.

The functionality of the Magnum 6K25e Switch -48VDC, 24VDC and 125VDC Dual-Source Option units is identical to the standard AC-powered models. Refer to the main sections of this ***Installation and User Guide*** for a detailed description of the Magnum 6K25e Switches.

C3.0 DUAL-SOURCE OPTION, THEORY OF OPERATION

The Dual-Source DC power option is designed using diodes inside of the chassis on each DC power input line. A diode is placed in each of the four input lines (behind the four external power connection terminals) so that power from an external source can only flow into the unit. This allows the unit to operate whenever DC power is correctly applied to either or both of the two inputs

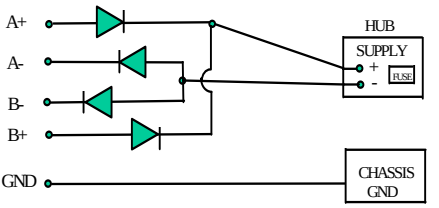

C4.0 FEATURES AND BENEFITS OF THE DUAL-SOURCE DESIGN

a) The Switch unit can receive power from either input, "A" or "B". The hub will normally draw its power from the DC source with the highest voltage at a given time.

b) The Switch unit will not allow power to flow from a higher voltage input to a lower voltage input, i.e. the two DC power sources are not mixed together by the hub.

c) When one correct DC input is present, the Switch will receive power if the other DC input is absent, or even if it is connected with reverse polarity or shorted or grounded.

d) Reverse polarity connections, if they should accidentally occur on either input, will not damage the Switch or power supply internally (nor will it blow the fuse in the internal power supply) because of the blocking action of the diodes. This is true even if one input connection is reversed while the Switch is operating from the other source.

e) The Switch will not receive power (and will not work) when both inputs are simultaneously absent or are both incorrectly connected.

C5.0 INSTALLATION

This section describes the proper connection of the -48VDC, 24VDC and 125VDC dual source leads to the -48VDC, 24VDC 7 125VDC power terminal block on the Magnum 6Ks Switch (shown in Figure)

The -48VDC terminal block on the Magnum 6K25e Switch, as shown in Fig C5.0 is located on the right rear of the unit and is equipped with five (5) screw-down lead posts. If it is the reverse model it is located on the left rear. The primary terminals are identified as positive (A+), negative (A-), and the secondary power terminals as negative (B-), positive(B+). The chassis "earth" or ground (GND) is a threaded post with a #6 nut. The Dual Source terminal block for the 24VDC and 125VDC are similar.

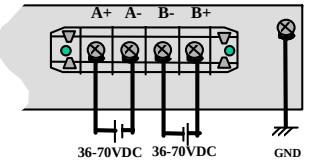

Figure C5.0: -48VDC Dual-Source, wiring connections to the External Terminal Block on a Magnum 48VDC with Dual-Source option

Note: The GND should be hooked up first. The 6K25e unit has a floating ground, so the user may elect to Ground either + or = terminal to suit the customer's use.

Before connecting hot lines to the Terminal Block of –48VDC, 24VDC or 125VDC, always use a digital voltmeter to measure the output voltage of the power supply and determine the lead which is more "+ve potential". The more "+ve" voltage lead from 48V or –48V supply must be connected to the post labeled "+".

The connection procedure is straightforward. Simply connect the DC leads to the Switch's power terminals, positive (+) and negative (-) screws. The use of Ground (GND) is optional; it connects to the Switch chassis. Ensure that each lead is securely tightened.

The 24VDC & 125VDC terminal block on Magnum 6K25e's is similar to that described in the –48VDC information above.

C5.1 UL Requirements

The following must be adhered to in order to conform to UL requirements:

1. *Minimum 18 AWG cable for connection to a Centralized DC power source.*
2. *Minimum 14 AWG cable for connection to earthing wiring.*
3. *Use only with Listed 10 A circuit breaker provided in building installation.*
4. *"Complies with FDA radiation performance standards, 21 CFR subchapter J." or equivalent.*
5. *Fastening torque of the lugs on the terminal block: 9 inch pound max.*
6. *Centralized DC Power Source cable securement, use at least four cable ties to secure the cable to the rack at least 4 inches apart with the first one located within 6 inches of the terminal block.*

C6.0 ORDERING INFORMATION

To order the optional Dual-Source -48VDC power supply factory installed, order "Dual-Src48V" as a separate line item following the product model.

Example: **Magnum 6K25eR-48VDC**
Dual-Src-48V for the regular DS model with no ON-OFF switch
or **Dual-Src48V-SWITCH** with the ON-OFF manual switch.

Similarly, order the "Dual –source 24VDC" or "Dual-source 125VDC" as a separate line item following the product model.

Example: **Magnum 6K25eR-24VDC or Magnum 6K25eR-125VDC**

Dual-Src24V for regular models with no ON-OFF switch
Or **Dual-Src125V-Switch** for models with the ON-OFF switch

C7.0 OPERATION

Operation of the Dual-Source Magnum 6Ks-48VDC, 24VDC and 125VDC Switch models are identical to that of the standard models.